


Panasonic®

CD Stereo System SC-CH64M

Operating Instructions

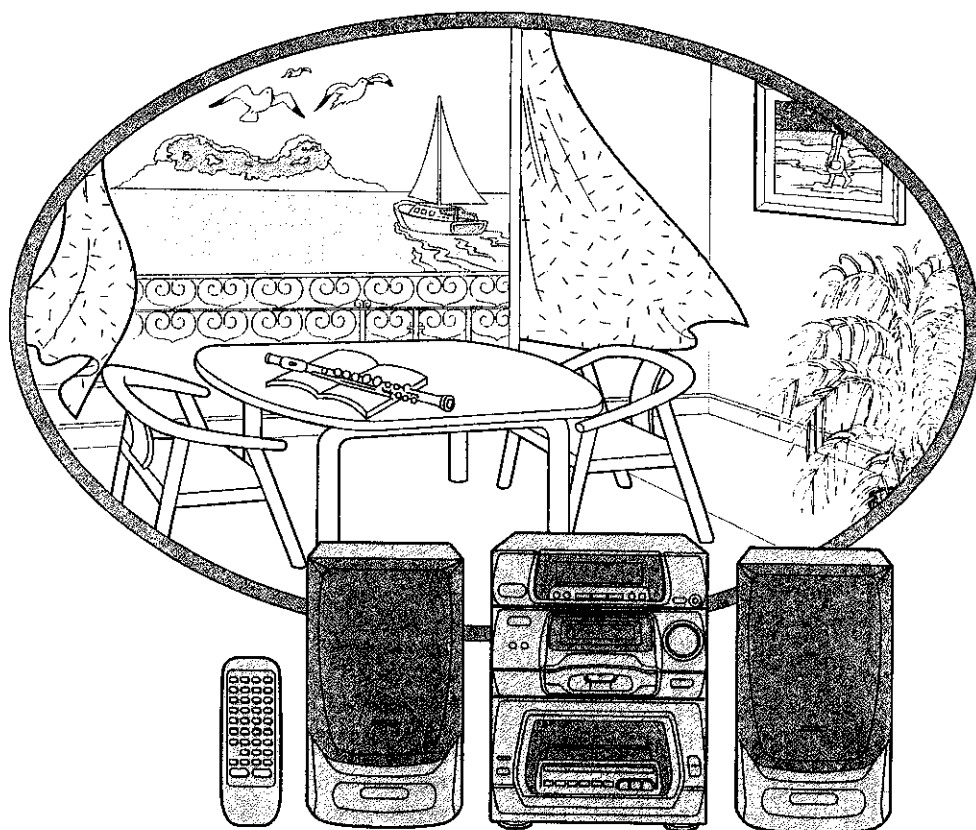

Note:

The "EB" indication shown on the outside packing case indicates United Kingdom.

Before connecting, operating or adjusting this product, please read these instructions completely. Please save this manual.

EB GN

COMPACT
disc
DIGITAL AUDIO

RQT3449-B

Dear customer

Thank you for purchasing this product.
For optimum performance and safety, please read these instructions carefully.

These operating instructions are applicable to the following systems.

| | |
|------------------|-----------------|
| System | SC-CH64M |
| Main unit | SA-CH64M |
| Speakers | SB-CH64 |


CAUTION!

THIS PRODUCT UTILIZES A LASER.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

CAUTION!

DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT IN CABINET OR IN ANOTHER CONFINED SPACE IN ORDER TO KEEP WELL VENTILATED CONDITION. ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION CONDITION TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING.

| | | |
|----------|--|---------------------------|
| DANGER | INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM. | (Inside of product) |
| ADVARSEL | USYRLIG LASERSTRÅLING VED ÅBNING. UNDRÅ DIREKT UDSÆTTELSE FOR STRÅLING. | (Indersiden af apparatet) |
| VARO! | AVAITAESSA JA SUOJAKUUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄYHÖNÄ LASERISATEL VILLE. ÄLÄ KAISO SÄTEESEEN. | (Tuotteen sisällä) |
| VARNING | OSYRLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÅRREHÄR LUKKOPPLAD. BETRÄKTA EJ STRÅLEN. | (Apparatens insida) |
| ADVARSEL | USYRLIG LASERSTRÅLING NÄR DEKSEL ÅPNES OG SIKKERHEDSÅG BRYTES. UNDRÅ EKSPONERING FOR STRÅLEN. | (Produktets innside) |
| VORSICHT | UNSIHTBARE LASERSTRÅLUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN. | (Im Inneren des Gerätes) |

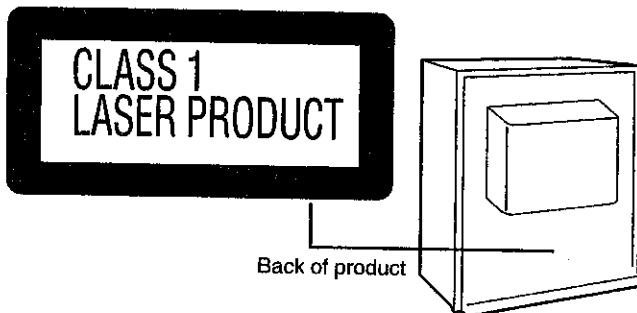

THIS MUSIC SYSTEM IS CAPABLE OF RECEIVING THE NEW AM STEREO BROADCASTS FROM THE AM BAND RADIO STATIONS. HOWEVER LIKE MANY MUSIC SYSTEM CURRENTLY AVAILABLE ON THE MARKET IT WILL REPRODUCE THIS AM STEREO SIGNAL ONLY IN AM MONO, WHICH, IN EFFECT, IS OF NO LESSER QUALITY THAN YOUR EXISTING AM MONO MUSIC SYSTEM.

Table of contents

Before use

| | |
|--|---|
| Suggestions for safety | 3 |
| Caution for AC mains lead | 4 |
| Supplied accessories | 5 |
| Concerning the remote control | 5 |
| Connections | 6 |
| Basic connections (for supplied accessories) | 6 |
| Placement of speakers | 7 |
| External unit connection | 7 |
| Optional antenna connections | 7 |
| Front panel controls | 8 |

Preparations

| | |
|-----------------------------|----|
| Setting the time | 9 |
| Memory presetting | 10 |
| Automatic memory presetting | 10 |
| Manual memory presetting | 10 |

Radio operations

| | |
|-------------------------------|----|
| Listening to radio broadcasts | 11 |
| Preset tuning | 11 |
| Manual tuning | 11 |

Compact disc operations

| | |
|----------------------------|----|
| Listening to compact discs | 12 |
| Setting/Removing discs | 12 |
| CDs playback modes | 12 |
| Sequential play | 13 |
| Single disc play | 14 |
| Disc grouping play | 15 |
| Program play | 18 |
| Direct programming | 19 |
| Random play | 20 |
| 1-disc function | 21 |
| Repeat function | 22 |
| Search function | 22 |
| Skip functions | 23 |

Tape deck operations

| | |
|------------------------------------|----|
| Listening to tapes | 24 |
| To fast-forward or rewind the tape | 24 |

Other functions

| | |
|-----------------------------------|----|
| Changing sound quality and field | 25 |
| Selecting sound quality and field | 25 |
| Adding bass | 25 |
| Convenient functions | 25 |
| Easy play | 25 |
| To mute the volume | 26 |
| Demo function | 26 |

Suggestions for safety

Recording operations

| | |
|---|-----------|
| Before recording | 26 |
| Type of tape which can be recorded correctly | 26 |
| How to advance the leader tape | 26 |
| Concerning the volume level while recording | 26 |
| Concerning the sound quality and field while recording | 26 |
| To erase a recorded sound | 26 |
| Recording from radio broadcasts | 27 |
| To reduce the noise while MW/LW (AM) recording (Beat proof function) | 27 |
| Recording from compact discs | 28 |
| Normal recording | 29 |
| One-touch editing | 30 |

Timer operations

| | |
|-------------------------------------|-----------|
| Using the play timer | 31 |
| Using the record timer | 33 |
| Using the sleep timer | 35 |
| To use two timers together | 35 |

Reference

| | |
|---|-------------------|
| Using an external unit | 35 |
| Quick reference of remote control operations | 36 |
| Concerning compact discs | 40 |
| Concerning cassette tapes | 40 |
| Maintenance | 41 |
| Troubleshooting guide | 42 |
| Technical specifications | Back cover |

■ Placement

Avoid placing the unit in areas of:

- direct sunlight
- high temperature
- high humidity
- excessive vibration
- uneven surfaces (Place the unit on a flat level surface.)

Such conditions might damage the cabinet and/or other component parts and thereby shorten the unit's service life.

To protect the unit against sound distortion and acoustical effects, please place the unit at least 15 cm away from wall surfaces etc.

■ Ventilation

- Place the unit in a well-ventilated position at least 10 cm away from wall surfaces etc.
- Ensure that curtains and similar materials do not obstruct the ventilation holes.

■ Stacking

Never place heavy items on top of the unit or the power cord.

■ Voltage

- It is very dangerous to use an AC power source of high voltage such as for an air conditioner.
A fire might be caused by such a connection.
- A DC power source can not be used.
Be sure to check the power source carefully, especially if on a ship or other place where DC is used.

■ Power cord protection

- Avoid cuts, scratches or poor connection of the AC main cord, as this may result in fire or electric shock.
Excessive bending, pulling or slicing of the cord should also be avoided.
- Do not pull on the cord when you are disconnecting the power, as this could cause an electric shock. Grasp the plug firmly when you disconnect the power supply.
- Never touch the plug with wet hands or a serious electric shock could result.

■ Foreign materials

- Ensure that no foreign objects, such as needles, coins, screwdrivers etc., accidentally fall into the unit or through the ventilation holes.
Otherwise, a serious electric shock or malfunction could occur.
- Be extremely careful about spilling water or liquid on/into the unit, as a fire or electric shock could occur.
(Disconnect the power plug and contact your dealer immediately if this occurs.)
- Avoid spraying insecticides onto the unit as they contain flammable gases which can be ignited.
- Insecticides, alcohol, paint thinner and similar chemicals should never be used to clean the unit as they can cause flaking or cloudiness to the cabinet finish.

■ Service

- Never attempt to repair, disassemble or reconstruct the unit if there seems to be a problem.
A serious electric shock could result if you ignore this precautionary measure.
- If a problem occurs during operation (the sound is interrupted, indicators fail to light up, smoke is detected, etc.) contact your dealer or Authorized Service Center immediately.
- Disconnect the power supply if the unit will not be used for a long time.
Otherwise the operation life could be shortened.

Cautions on moving your stereo:

Before moving your stereo to another location, be sure to remove all discs from the rack and turn off the stereo.

The changer mechanism automatically locks when the system is turned off, to protect it against damage in transport. Therefore, always press **POWER** and make sure "GOOD BYE" appears on the display before you unplug the stereo.

Failure to do so will expose the compact discs and the stereo to the risk of severe damage.

Caution for AC mains lead

(For United Kingdom)

("EB" area code model only)

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as shown below.

If in any doubt please consult a qualified electrician.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

 
Blue: Neutral

Brown: Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:


The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

Under no circumstances should either of these wires be connected to the earth terminal of the three pin plug, marked with the letter E or the Earth Symbol .


Before use

Remove the connector cover as follows.

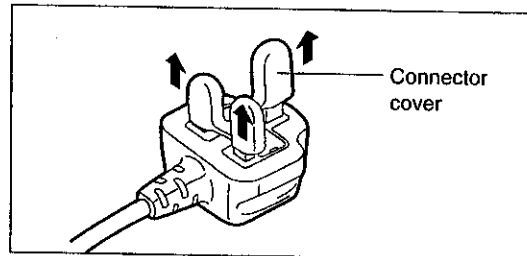


How to replace the fuse


1. Remove the fuse cover with a screwdriver.

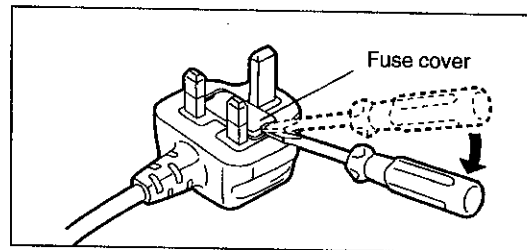

2. Replace the fuse and attach the fuse cover.

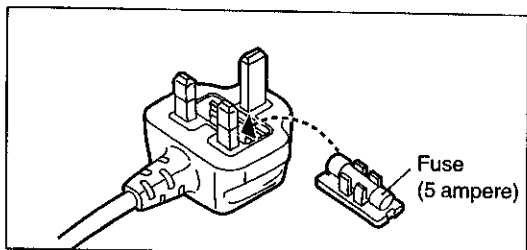

Supplied accessories

 

Please check and identify the supplied accessories.

- AC mains lead 1 pc.
 (For United Kingdom: VJA0733) (For Australia and New Zealand: RJA0036-K)




- FM indoor antenna 1 pc.
 (For United Kingdom: RSA0007) (For Australia and New Zealand: RSA0006)




- AM loop antenna set (RSA0010)
 • AM loop antenna 1 pc.
 • AM antenna holder 1 pc.
 • Screw 1 pc.



- Remote control transmitter 1 pc.
 (EUR644340)

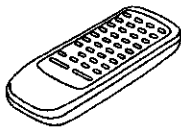


- Batteries (UM-3, "AA", R6) 2 pcs.

 

- Notebook-like binder [Liner notes organizer] (RFA0622-K1) 1 pc.



 - Adhesive number (RQLA0321) 1 pc.



- Antenna plug adaptor (Supplied for United Kingdom only: SJP9009) 1 pc.




Use numbers indicated in parentheses when asking for replacement parts.

Concerning the remote control

Battery installation

Insert the batteries with this unit as shown below.
 Use two UM-3 "AA", IEC R6 (1.5 V) or equivalent batteries.

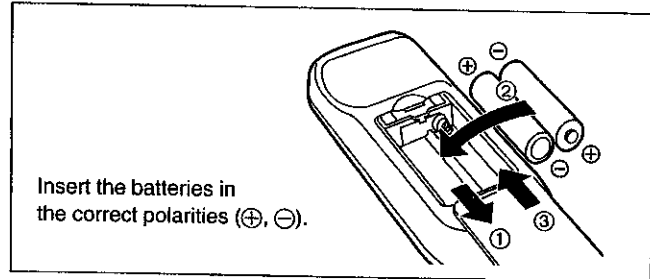

Use of batteries


- Do not mix old and new batteries, or batteries of different types (manganese and alkaline, etc.).
- Never subject batteries to excessive heat or flame; do not attempt to disassemble them; and be sure they are not short-circuited.
- If the remote control is not to be used for a long period of time, remove the batteries and store them in a cool, dark place.
- Do not attempt to recharge alkaline or manganese batteries.
- Do not use rechargeable type batteries.

Battery life

The battery life is about one year.

The batteries should be replaced if commands from the remote control transmitter do not operate the unit even when the transmitter is held close to the front panel.

Correct method of use

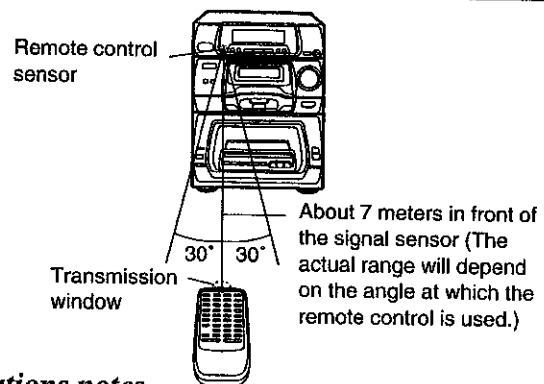

Operations notes

- Aim the remote control's transmission window toward the unit's sensor. Avoid any obstacles.
- Be sure the transmission window and the unit's sensor are free from dust. Excessive dust might affect its performance.
- The operation may not be correct if direct sunlight or other strong light source strikes the receiving sensor of this unit. If there is a problem, place the unit away from the light source.
- If this system is installed in a rack with glass doors, the glass doors' thickness or color might make it necessary to use the remote control a shorter distance from the system.
- Never place heavy items.
- Do not disassemble or reconstruct.
- Do not spill water or other liquids.


Connections

Basic connections (for supplied accessories)

1 FM indoor antenna

For United Kingdom

For Australia and New Zealand

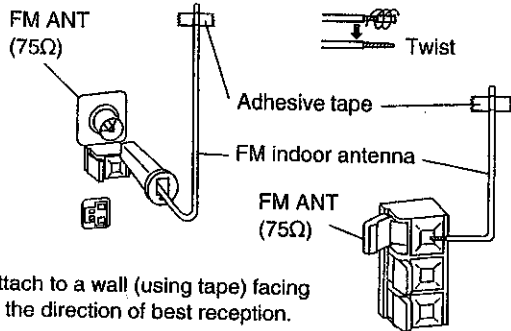


Attach to a wall (using tape) facing in the direction of best reception.


For best reception and sound quality:
An FM outdoor antenna is recommended.
Disconnect the FM indoor antenna if an FM outdoor antenna is installed.

3 Speaker cords

 ① Strip off the outer covering, and twist the center conductor.



② Match the cords to the terminals by color and connect.

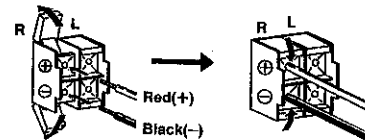


Note

To prevent damage to circuitry, never short-circuit positive (+) and negative (-) speaker wires.

For United Kingdom:
Insertion of Connector

Even when the connector is perfectly inserted, depending on the type of inlet used, the front part of the connector may jut out as shown in the drawing. However there is no problem using the system.

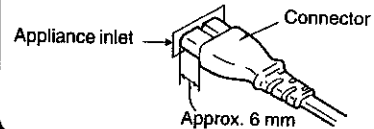





For United Kingdom:
BE SURE TO READ THE CAUTION FOR AC MAINS LEAD ON PAGE 4 BEFORE PROCEEDING TO STEP 4.

4 AC mains lead

Plug the cord into an outlet only after all other connections have been made.

2 AM (MW) loop antenna

 
1. Attach the antenna holder to the rear panel. Press the antenna holder hard enough to get it fixed firmly in place, with a click.
2. Clamp the antenna to the antenna holder.
3. Connect the antenna terminal to the rear panel of the unit.
4. While listening to an MW (AM) broadcast, position the loop antenna for the best reception.

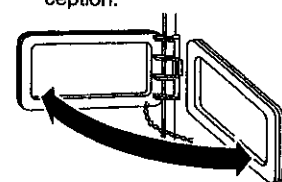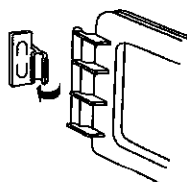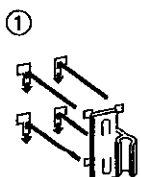

For Australia and New Zealand
The configuration of AC mains lead and FM antenna terminal are different.

Placement of speakers

Speakers are symmetrically the same on the inside, so you don't have to orient them in a certain one or another.

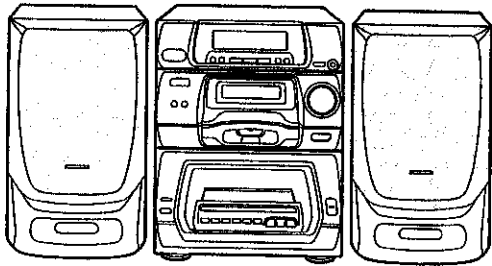

For your reference

For your listening pleasure, keep your speakers from touching the stereo.

Caution

Use the speaker(s) only with the recommended system. Failure to do so may lead to damage to the amplifier and/or the speaker, and may result in the risk of fire. Consult a qualified service person if damage has occurred or if you experience a sudden change in performance.

External unit connection


- For details, refer to the instruction manual of the units which are to be connected.
- When units other than those described below are to be connected, please consult with your audio dealer.

Analog player

Only an analog player with a built-in phono equalizer can be connected.

This example shows how to connect the analog player with the PHONO OUT/LINE OUT switch.

Set the switch to the "LINE OUT" position at the back of the analog player.

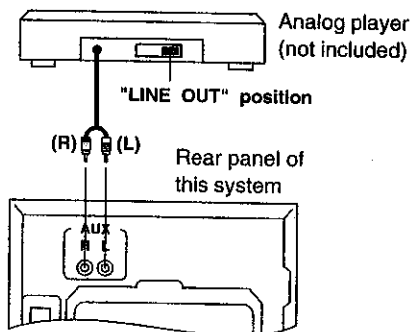

Optional antenna connections


You may need an outdoor antenna if you use this system in a mountainous region or inside a reinforced-concrete building, etc.

FM outdoor antenna (not included)


Note

An outdoor antenna should be installed by a competent technician only.

For United Kingdom

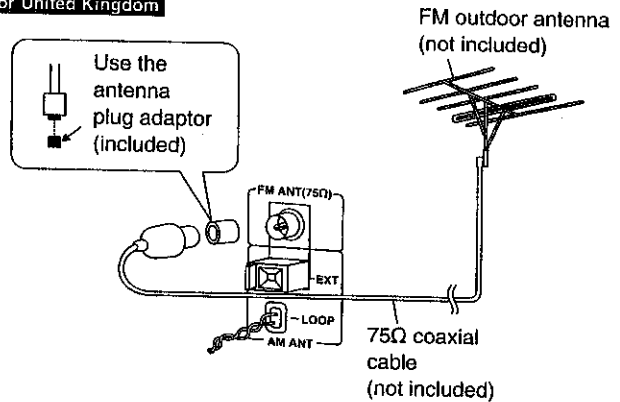


For Australia and New Zealand

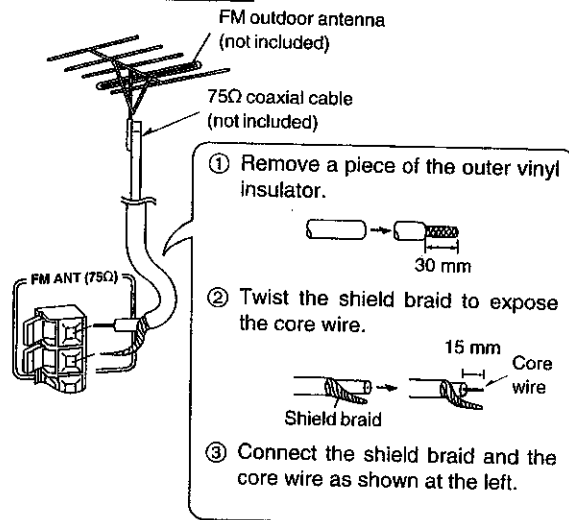


AM outdoor antenna (not included)

Connect the outdoor antenna without removing the AM loop antenna. Run 5 to 12 m of vinyl-covered wire horizontally along a window or other convenient location.

For United Kingdom

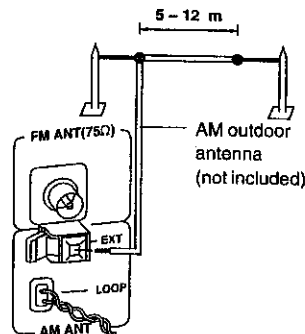



For Australia and New Zealand

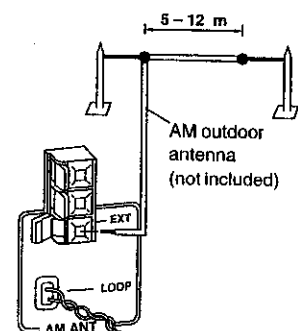

Note

When the system is not in use, disconnect the outdoor antenna to prevent possible damage that may be caused by lightning. Never use an outdoor antenna during an electrical storm.


Front panel controls

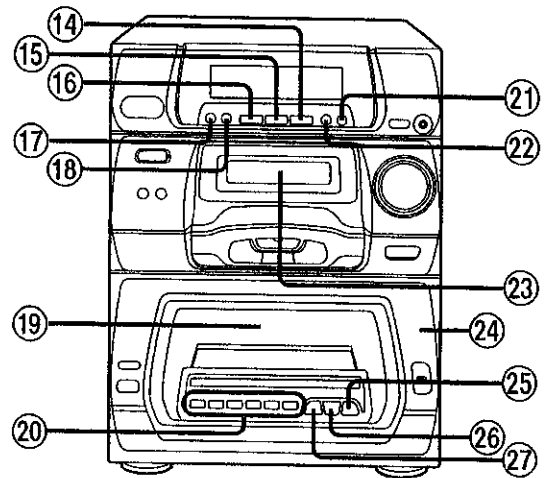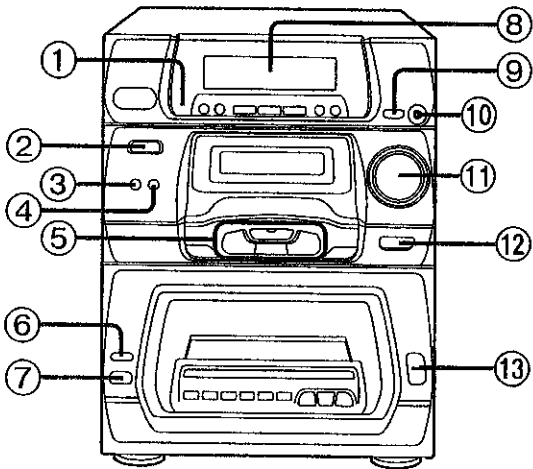

| No. | Name | Ref. page |
|-----|---|-------------------|
| ① | Remote control sensor | 5 |
| ② | Power "STANDBY ⏻ /ON" switch (POWER, STANDBY ⏻ /ON) | 9 |
| | Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power. | |
| ③ | Reverse mode select button (REV MODE) | 24 |
| ④ | Recording start/stop button (REC START/STOP) | 27 |
| ⑤ | Basic operating buttons | |
| | Buttons change according to the source. | 9, 10, 11, 13, 24 |
| ⑥ | CD edit button (CD EDIT) | 30 |
| ⑦ | Single play button (SINGLE PLAY) | 14 |
| ⑧ | Display | |
| ⑨ | V. BASS/DEMO button (-V.BASS/-DEMO) | 25 |
| ⑩ | Headphones jack (PHONES) | 35 |
| ⑪ | Volume control (VOLUME) | 11 |
| ⑫ | Cassette holder open button (\blacktriangle OPEN) | 24 |
| ⑬ | Disc skip/group name select button (DISC SKIP/GROUP NAME) | 13, 15 |


| No. | Name | Ref. page |
|-----|--|-----------|
| ⑭ | Tuner, band select button (TUNER, BAND) | 10 |
| ⑮ | CD button (CD) | 13 |
| ⑯ | Tape button (TAPE) | 24 |
| ⑰ | Record timer/play timer button (⌚ REC/ ⌚ PLAY) | 32, 34 |
| ⑱ | Clock/timer button (CLOCK/TIMER) | 9, 31, 33 |
| ⑲ | Window | |
| ⑳ | Group file select buttons (GROUP FILE) | 15 |
| ㉑ | EQ space select button (EQ SPACE) | 25 |
| ㉒ | AUX button (AUX) | 35 |
| ㉓ | Cassette holder | 24 |
| ㉔ | Rack panel | 12 |
| ㉕ | Group name enter button (NAME ENTER) | 15 |
| ㉖ | Group disc enter button (DISC ENTER) | 16 |
| ㉗ | Group mode select button (MODE) | 13 |

Setting the time

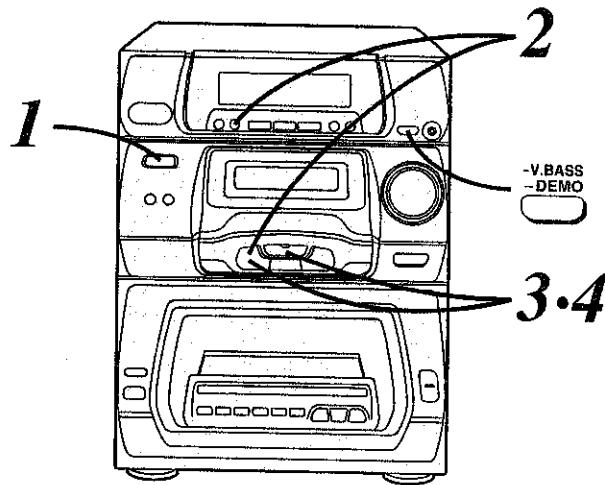

- The built-in demo function will run automatically shortly after you plug in the system (see page 26).
- The demo function in the power standby mode will be cancelled automatically by setting the time.

 This is a 24-hour display clock.
This example in the figure shows how to set the time for 18:25 (6:25 p.m.).



Switch on the power.


 


① Press **CLOCK/TIMER** once to show "CLOCK".





Within 7 seconds:



② Press **MEMORY/SET**.

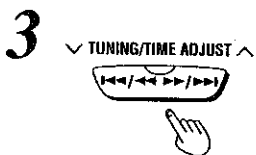

  
① Press **∇** or **∧** to select the hour.



② Press **MEMORY/SET**.

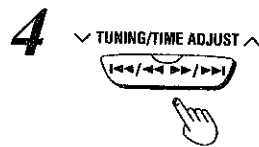 

 ① Press **∇** or **∧** to select the minutes.



② Press **MEMORY/SET** to finish setting the time.

The clock now starts.
The display will return to the previous display after about 5 seconds.

When "0:00" flashes or the demo function is running:

This happens when you connect the AC mains lead for the first time or if there has been a power failure. In this case, reset the time.

If the minutes setting has gone wrong:

1. Press **CLOCK/TIMER**.
2. Press **MEMORY/SET** twice.
3. Press **∇** or **∧** to set the minutes, and then press **MEMORY/SET**.

To display the clock again:

Press **CLOCK/TIMER**.
The display will return to the previous display after about 7 seconds.

For your reference

The hour indication will not change when the minutes pass from "59" to "00".

Demo function while the power is on:


When the input source is set to "CD" or "TAPE", the demo function will run automatically after about 2 minutes or more in the stop mode.

You can cancel the demo function by pressing and holding **-V.BASS/-DEMO** for about 2 seconds or more.

Memory presetting

• If broadcast frequencies are preset in the memory, you can easily tune in any of these frequencies from the system or remote control unit.

• Up to 12 stations can each be set in the FM, MW and LW (For Australia and New Zealand: FM and AM) bands with the automatic or manual memory presetting.

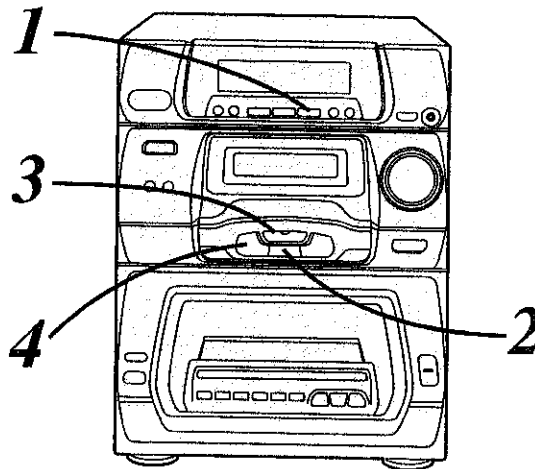

Automatic memory presetting

This example in the figure shows how to preset stations in the FM band.



Press **TUNER BAND** to select "FM", "MW" or "LW".

For Australia and New Zealand


 
Note that for Australia and New Zealand, there are two bands of "FM" and "AM" instead of "FM", "MW" and "LW".

The power will come on automatically, even if the stereo is on standby.



Press **TUNING MODE** to select "MANUAL".

Each time you press the button, "MANUAL" and "PRESET" will appear alternately.

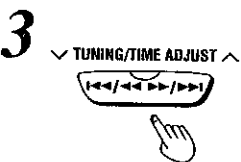

Press **∨** or **∧** until the display shows the frequency from which you want to begin automatic memory presetting.

Holding the button down will scroll the frequency. Repeatedly tapping on it will change the frequency one step with every touch.

While scrolling, if the radio picks up a station, it will automatically tune it in (auto tuning).




Press and hold **MEMORY/SET**.

Release the button when the frequency display begins to change.

The system will automatically memorize the received broadcast frequencies in sequence.

The moment the frequency is memorized:

The station and channel will be displayed for about 1 second.

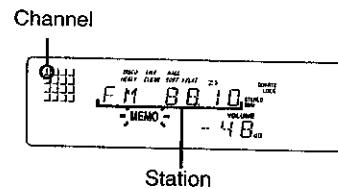

When auto memorization is complete:

The last station to be memorized will be left on the display.

To confirm the preset stations:

1. Press **TUNING MODE** to select "PRESET".
2. Press **∨** or **∧**.

Note

Auto memory presetting does not work when radio waves from the broadcasting station are too strong or too weak.

In such case, carry out presetting manually. (See below.)

Manual memory presetting


(After step 1–2 on the left of this page)

1. Press **∨** or **∧** to select the desired frequency, and press **MEMORY/SET**. ("MEMO" flashes.)
2. Press **∨** or **∧** to select the preset channel, and then press **MEMORY/SET** during "MEMO" flashes. "MEMO" indicator goes off.

Memory retention:

The contents of the memory will continue to be stored for approximately 2 weeks, even if the power supply cord is disconnected.

Listening to radio broadcasts

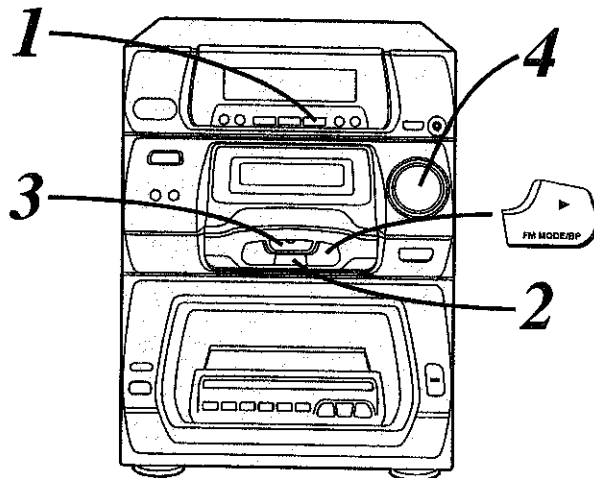

Preset tuning

Be sure you've completed the steps in "Memory presetting" on page 10. This example in the figure shows how to listen to FM preset channel 1.



Press **TUNER BAND** to select "FM", "MW" or "LW".


 
For Australia and New Zealand
Note that for Australia and New Zealand, there are two bands of "FM" and "AM" instead of "FM", "MW" and "LW".

The power will come on automatically, even if the stereo is on standby.



Press **TUNING MODE** to select "PRESET".


Each time you press the button, "MANUAL" and "PRESET" will appear alternately.

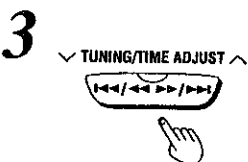


Press **∇** or **∧** to select the preset channel.

"STEREO" lights when an FM stereo broadcast is being received. "QUARTZ LOCK" lights when you precisely tune in a broadcast station.

 Preset channel



 Turn **VOLUME** to adjust the volume as you like.



Manual tuning

If the frequency is not known, use **∇** or **∧** for searching.

1. Press **TUNER BAND** to select a band.
2. Press **TUNING MODE** to select "MANUAL".
Each time you press the button, "MANUAL" and "PRESET" will appear alternately.
3. Press **∇** or **∧** to tune in the desired broadcast. Repeatedly tapping the button will change the frequency one step with every touch. Holding it down will scroll the frequency. While scrolling, if the radio picks up a station, it will automatically tune it in (auto tuning).
Note
Tuning may stop automatically if any jamming is encountered.
4. Turn **VOLUME** to adjust the volume as you like.

Switching the mode from stereo to monaural while listening to an FM station: Press **FM MODE/BP**.

The sound reception mode switches to "MONO" (monaural) and "MONO" lights.

When "MONO" indicator lights up:

Use this setting when listening to or recording in monaural. All sound reception including stereo sound, is in monaural.

When "MONO" indicator goes off:

Use this setting for normal listening. Both stereo and monaural sounds can be heard as they are.

For your reference

If too much noise is produced in the FM stereo mode, press **FM MODE/BP** and check "MONO" lights up. The sound will then be heard in monaural. If the broadcast signal is weak, or if there is a large amount of interference, you will get a clearer sound in "MONO" mode.

Note

You cannot memorize the stations in the "MONO" mode.

Listening to compact discs


Setting/Removing discs

Special notes

- You can set discs in the rack and remove them too, while playing discs.
- Never set a disc in the slot of the disc being played.
- Sometimes the rack panel cannot be opened while a disc is playing. It is a question of time. In such case, wait until you can open it.
- Do not open the rack panel while the changer is changing discs.

How to set discs


1. Open the rack panel.

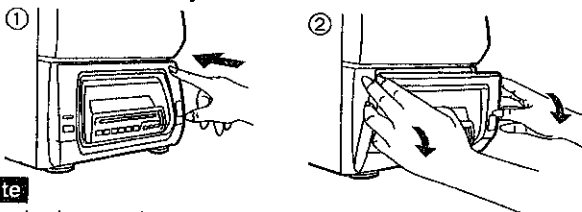

Note


Except when setting or removing discs, keep hands out of the changer while open. You could injure yourself if somehow entangled in the internal mechanism.

2. Slide the loader carriage to the slot you want. You can read the numbers between the prongs as shown below.

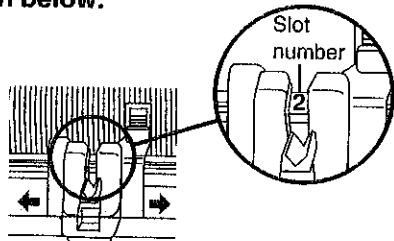

Slot No. 0 (SINGLE) is reserved for single disc play (p. 14).

3. Set the disc on the loader and flip the loader upwards.

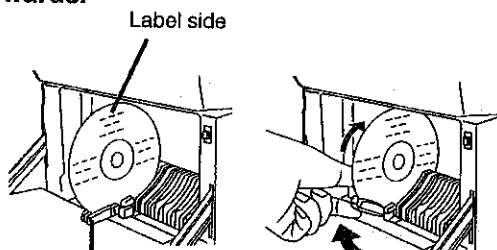

Caution

Flip this part upward.

- Do not use 8 cm discs fitted with expander rings. Use the 8 cm discs as they are, to prevent damage to the slots from rings.
- Do not use cleaning discs, discs with stickers on the label side or warped discs. All of these could damage your changer.
- Do not put anything other than discs in the changer.
- Do not set a disc in the slot of the disc being played (slot flashes). The disc in play is returned to its slot when finished. If the two discs somehow jam the slot, one or both could be damaged. When this happens, the message "TAKE OUT" will appear on the display. Remove the disc that doesn't belong in the slot and close the rack panel.

Notes

- Set discs with the label facing to the right.
- Never load more than one disc in any given slot.

4. Close gently the rack panel.


You will hear a catching sound when the rack panel closes.

How to remove discs

1. Open the rack panel.

2. Slide the loader carriage to the slot you want.

3. Press the eject button gently on the loader carriage.

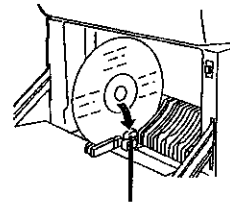

Eject button

Note


When removing CDs while the power is on, make sure the source is set to "CD" before removing CDs.

If you cannot remove the disc:

1. Press CD.
2. Open the rack panel.
3. Slide the loader carriage to the slot of the disc you want to remove.
4. Press the eject button.

How to know what disc in what slot

Your changer comes with a notebook-like binder (liner notes organizer) in which you can keep your CD liners. There are also adhesive numbers for indicating slot numbers in the binder. This is a convenient way to keep track of what disc is in what slot.

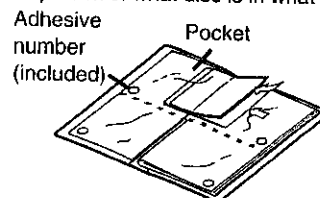

Put two liners back-to-back inside each pocket, as shown above.

Note

Do not put CD cases in the binder.


CDs playback modes

With this CD changer, you can playback CDs in the following 2 modes.


- Block mode...Normal sequential playback (page 13).
- Group mode...Only CDs registered in the selected group are played back (page 15).

Sequential play

The changer plays all the tracks on all the discs in order and stops automatically when the last track on the last disc finishes playing.

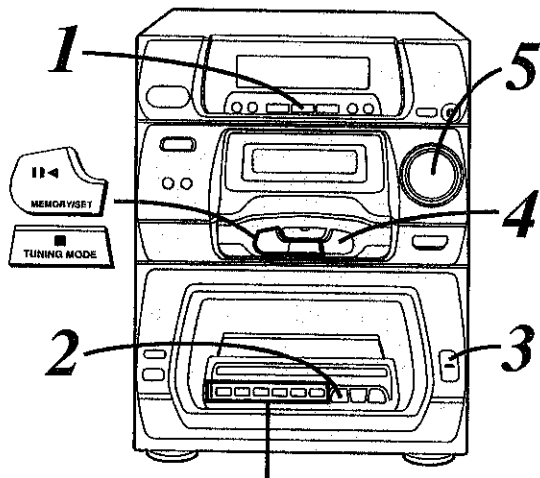

GROUP FILE buttons A-F

 

1 Press CD.

The power will come on automatically, even if the stereo is on standby. While the changer checks which slots have CDs and which don't, you will hear the internal mechanism working. In the meantime, "SEARCH" will flash on the display.



2 Press MODE to select "BLOCK".

Each time you press the button, "BLOCK" and "GROUP" will appear alternately.




3 Press DISC SKIP/GROUP NAME (∨ or ^) until you reach the desired disc.

∧: Skips forward to next disc.
∨: Skips backwards to the preceding disc.




4 Press ►.

Play will begin.

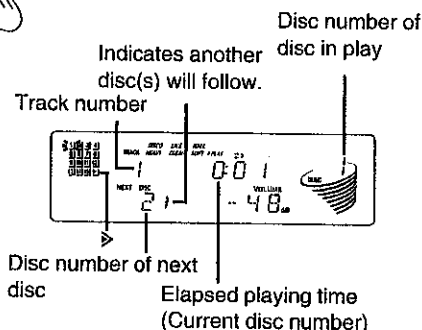

The changer will play all CDs up through the one before the CD you started with, and it will stop automatically after playing the last track on it.

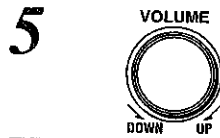

5 Turn VOLUME to adjust the volume as you like.

To temporarily stop play:




Press **MEMORYSET**.
Press **►** to resume play.

To stop play:



Press **TUNING MODE**.

The display will show the total number of tracks and the total playing time of the current disc.

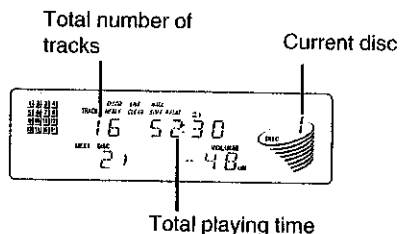

The total playing time displayed includes the silent sections between tracks. For this reason, it may be a few seconds longer than the playing time indicated on the disc.

When you open the rack panel, the total number of tracks and the total playing time go out.

Press **►** to re-start play.

Note

Outside light or noise may sometimes cause the changer to detect a disc when there isn't one. However, the changer always correctly detects the disc when in the play mode no matter what.

When "►" appears on the display:

It indicates there are 16 or more tracks on the disc at the playing position.

When "NO DISC" appears on the display:

It indicates there is no disc set in the slot.

For your reference

If you leave the front panel open while a disc is in play, when the disc is over, the changer will stop.

Convenient way to use GROUP FILE buttons (A-F):

The changer automatically divides the CD rack up into 6 blocks as shown below.

| DISC SLOT | 1-10 | 11-20 | 21-30 | 31-40 | 41-50 | 51-60 |
|-----------|------|-------|-------|-------|-------|-------|
| BLOCK | A | B | C | D | E | F |


One way to organize yourself would be to arrange the blocks by band or solo artist. Within each block, you could then set the discs in chronological order from the earliest you have until the band's (artist's) most recent. In sequential play, discs will be played in the set order.

Listening to compact discs

Sequential play

Listening to a particular track on a particular disc first


by remote control only

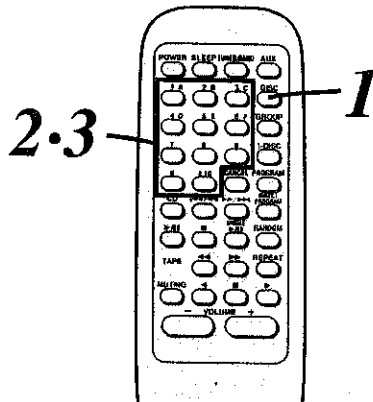


1



 Press DISC.




2

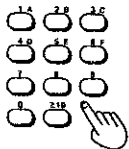

While "-" is flashing (approx. 10 seconds)
Press the numeric button(s) to
select the desired disc.

If you want to start listening from the first
track, you do not need to perform step 3.

3

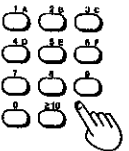

Press the numeric button(s) to
select the track.

The changer will play all CDs up through
the one before the CD you started with,
and it will stop automatically after playing
the last track on it.

Selecting double-digit discs and tracks numbers:


First press ≥10, and then press the numbers for the two digits.

For example: number 20

Press ≥10, then 2, and then 0.


Single disc play

Single disc play is for that special disc of yours, perhaps one you just bought. You see, the changer has a slot for one special disc which you can use even when the rack is full (max. 60 discs).

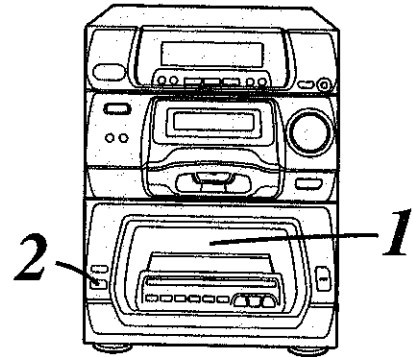

1

Open the rack panel, and set the disc in the
slot No. 0.

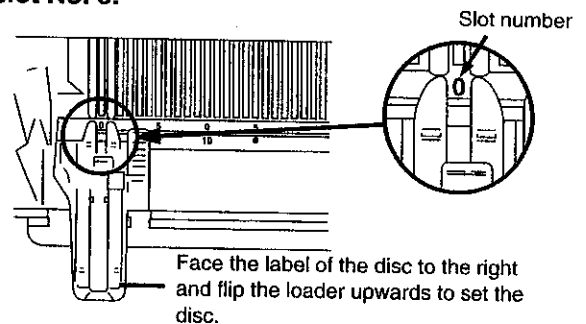

Face the label of the disc to the right
and flip the loader upwards to set the
disc.

 
2

SINGLE PLAY



Close the rack panel and press
SINGLE PLAY.

The disc will start playing from the first
track.



The changer plays all the tracks in order
and stops automatically when the last
track finishes playing.

To cancel single disc play mode:

- Select another disc by pressing DISC and the numeric buttons on the remote control.
- Skip to another disc with DISC SKIP/GROUP NAME. (See page 23.)
- Select a group. (See page 17.)
- In the block mode, press a GROUP FILE button (A-F).

For your reference

While "SINGLE" appears on the display, you can start play from the ► button as well as SINGLE PLAY.

Disc grouping play


Sometimes, you want to block off your CDs into groups. For example, by the type of music, or your favorite CDs, etc. Well, this changer lets you make up to six groups, A through F. Basically, it's like dropping a disc into a box, then playing just discs from that box. What's more, you can name the groups with any of the preset names.

| NAME | JAZZ | ROCK | ... | FAVORITE |
|-----------|------------|--------------|-----|-------------|
| GROUP | A | B | ... | F |
| DISC SLOT | 1, 3, 5... | 2, 10, 30... | ... | 1, 2, 11... |


You can register up to 60 CDs including the same disc more than once.

To name groups

This example shows how to name group A "JAZZ".

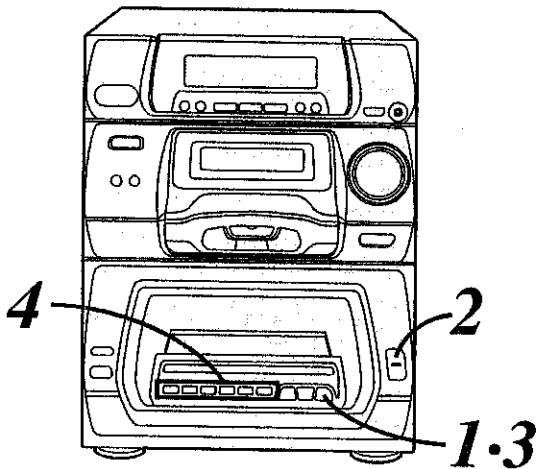

Press **NAME ENTER**.

 


2

DISC SKIP/
GROUP NAME



Press **DISC SKIP/GROUP NAME** (∇ or \blacktriangle) to select the name you want (**JAZZ**).

Names change in rotation as shown below, every time you press ∇ .

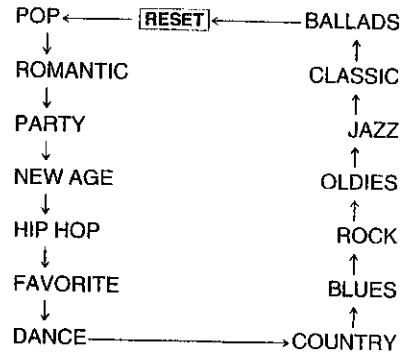


To change the names in the reverse order, press \blacktriangle .


3



 
Press **NAME ENTER**.



4

 

 Press the **GROUP FILE** button (A-F) for the group you want to name.



For example: To name group A

Press **[A]**.

This will officially name group A "JAZZ".

5


Repeat steps 1-4 to name other groups.

Listening to compact discs


Disc grouping play


Registering CDs under named groups


- Any single group can hold up to 60 CDs.
- You can enter the same CD into any single group as many times as you want.
- You cannot register the disc in slot No. 0, in your groups.

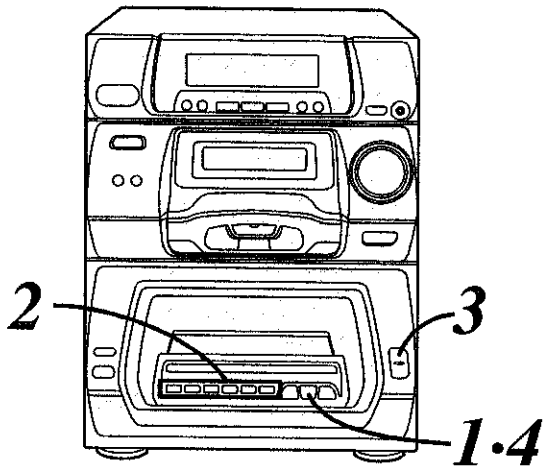



This example shows how to put disc 3 into the group "JAZZ" (group A).

 
1  **Press DISC ENTER.**



 
2  **Press the GROUP FILE button (A) for the group you want to register.**




 3  **Press DISC SKIP/GROUP NAME (v or ^) to select the disc you want.**



Lights up

 4  **Press DISC ENTER.**



"MEMO" will go out when the changer finishes processing your selection.

5 **Repeat steps 1-4 until you have completed all items.**

To check what discs are in what groups:

1. Press MODE to select "GROUP".
 2. Press the GROUP FILE button (A-F) you want and then press ■.
 3. Press DISC SKIP/GROUP NAME (v or ^).
- Every time you press the button, the next disc number in order is displayed.
- ^: Numbers progress in regular order.
 - v: Numbers progress in reverse order.

To cancel discs from groups:

 

1. Press DISC ENTER.
2. Press CANCEL on the remote control.
"CANCEL" appears on the display.
3. Press the GROUP FILE button (A-F) for the group you want to cancel.
4. Press DISC SKIP/GROUP NAME (v or ^) to select the disc you want to cancel.
"MEMO" lights.
5. Press DISC ENTER.
"MEMO" will go out when the changer cancels the disc from the group.

Note

If you remove group-registered CDs from the rack, the changer automatically cancels their entries from the group.



To start play

The changer will play only CDs in the selected group.

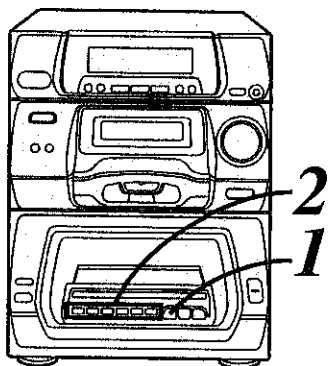

Press **MODE** to select "GROUP".

 Each time you press the button, "BLOCK" and "GROUP" will appear alternately.

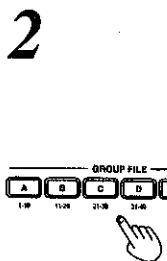

Press the **GROUP FILE** button (A-F) for the group you want to start play.

Before actually starting play, the changer will scroll disc numbers of the selected group from the smallest to the highest. Play will begin from the disc with the smallest number.

- If no discs have been registered, "----" will appear on the display.
- Unnamed groups will be displayed as "GROUP A, B, C" and so forth.


To cancel group play mode:

(In the stop mode)

Press **MODE** to select "BLOCK".

Clearing groups names and discs

You can clear both the group name and all registered discs at the same time.

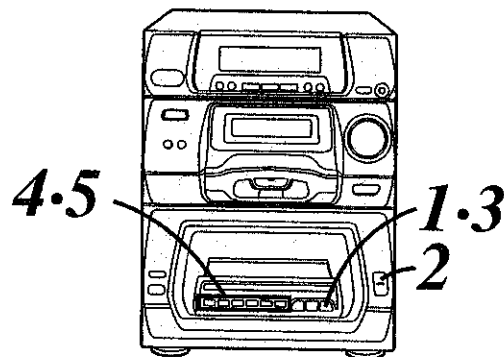

Press **NAME ENTER**.



Press **DISC SKIP/GROUP NAME** (v or ^) to select "RESET".

POP ← [RESET] ← BALLADS
 ↓ CLASSIC
 ROMANTIC ↑ JAZZ
 ↓ OLDIES
 PARTY ↑ ROCK
 ↓ BLUES
 NEW AGE
 HIP HOP
 FAVORITE
 DANCE → COUNTRY

 
 


Press **NAME ENTER**.

4

Press the **GROUP FILE** button (A-F) of the group you want to clear.


[The name of the group (A-F) will appear on the display.]



5

Press the same **GROUP FILE** button again.

 This will clear the group name and registered discs.





Listening to compact discs

Program play

by remote control only

Everyone has his/her favorite tracks. You can program the changer to play them in a specific order. With this changer, you can make one program and fill it with up to 24 selections from any of the discs in the rack.

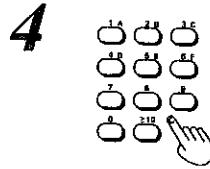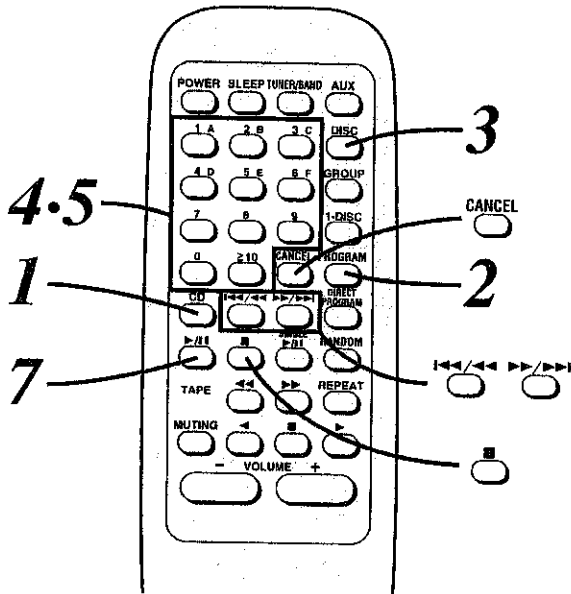


While “-” is flashing (approx. 10 seconds) **Select the disc(s) you want with the numeric buttons.**


For example:

To select disc 2, press 2.

 Specified disc number




You can select slot No. 0. “SINGLE” appears on the display.

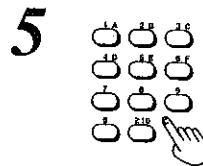

Press the numeric button(s) to specify the track.

 Program order




Specified track number



This example shows how to program track 8 of disc 2.




1 Press CD.

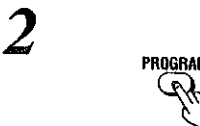


(In the stop mode)
2 Press PROGRAM.

  

3 Press DISC.

 

 6 Repeat steps 3 to 5 until you have completed all entries.



7 Press ▶/|| to start play.

Play will start and tracks will be played in the programmed order. When all tracks have been played, play will stop automatically.

Selecting double-digit discs and tracks numbers:

First press ≥10, and then press the numbers for the two digits.

For example: number 20

Press ≥10, then 2, and then 0.

To cancel program play mode:

(In the stop mode)

Press PROGRAM.

The changer will return to the sequential play mode.

The programmed contents will remain stored in memory until they are cleared, even after the program mode is canceled.

Therefore, after programming, it is possible to cancel the program mode and use another play mode and then hear the same program again at a later time.

In addition, if discs are changed, the program will be played using the new discs. If non-existing entries are found at this time, the changer will cancel them.

For your reference

 

The program will remain stored in memory for approximately 2 weeks even after the system is switched off.

Direct programming

by remote control only

You can add the track in play to your program.

In fact, a good way to build up your program is to listen to tracks and add those you like while they are still being played. It sure makes programming easier if you listen-and-program.

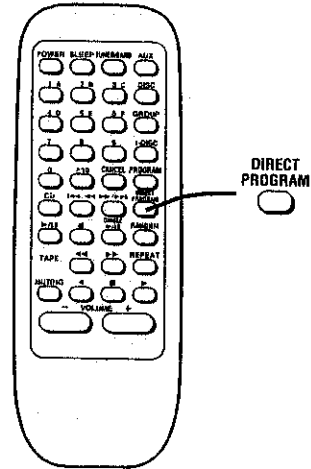


(In the play mode)

Press DIRECT PROGRAM.

The current track will be added to the tail end of the program.

Example Programmed order of the newly added track

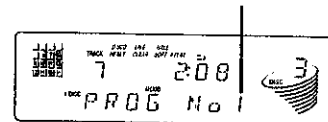

The display will return to the original indication after about 3 seconds.

When you make a program as explained under "Program play" on the opposite page, and then perform the above procedure without clearing the program first, the selected track is added to the end of the program.

To check programmed contents:

(In the stop mode)

1. Press PROGRAM.
2. Press **I◀◀/◀◀** or **▶▶/▶▶I**.

Notes

- You cannot add to the program if already full, that is, if already 24 selections have been programmed. If you press DIRECT PROGRAM in such case, the message "FULL" will be displayed. Therefore, direct programming is possible only when 23 or less tracks have been programmed.
- During program play, the DIRECT PROGRAM button does not respond to touch.

When "FULL" appears:


This indicates that an attempt has been made to program more than 24 tracks. No more than 24 tracks can be programmed.

To check programmed contents:

(In the stop mode)

Press **I◀◀/◀◀** or **▶▶/▶▶I**.

The track and its place in the program will appear on the display.

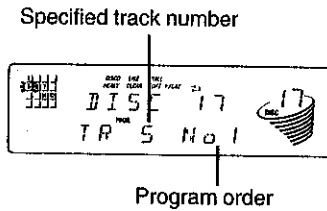

To add an entry:

(In the stop mode)

Repeat steps 3-5.

To clear a programmed track one by one:

1. (In the stop mode)
Press CANCEL.
"CANCEL" appears on the display.
2. Press DISC.
3. Select the disc you want to clear with the numeric buttons.
4. Press the numeric button(s) to specify the track.
(The track you specified will be canceled.)
5. Press CANCEL.
"CANCEL" goes out.

To clear all tracks:

Press **■** once in the stop mode or twice in the play mode.

"CLEAR" appears on the display for approximately 1 second.

Notes


- When you press MODE on the changer, the changer automatically cancels the program mode.
- If you enter non-existing track(s), the corresponding indicator illuminates and the entry is included in the count. In the play mode, the changer will cancel the non-existing entry.
- When including the slot No. 0 disc in the program, after programming, press **▶** on the changer or **▶/||** on the remote control to start play.

Listening to compact discs

Random play

One disc random play


The changer will play all tracks on the current disc in random order.

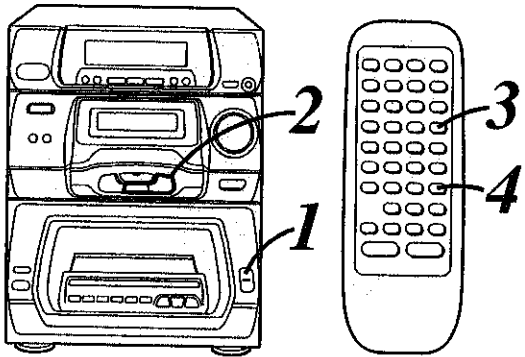


1 Press **DISC SKIP/GROUP NAME** (∇ or \blacktriangle) to select the desired disc.



2 Press \blacktriangleright and check play starts and which disc is being played. Then, press \blacksquare and stop play.

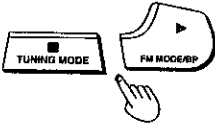

3 Press **1-DISC**.

 

4 Press **RANDOM**. Play will begin.



The changer will stop automatically when all the tracks have been played once.

In the single disc play mode:

Only tracks from the disc in slot No. 0 are played, though played in random order.

In the disc grouping play mode:

The changer randomly selects one disc from the group and plays the tracks in random order.


To cancel random play mode:

Press **RANDOM**.

"RANDOM" goes out.

Multiple disc random play

Full random play

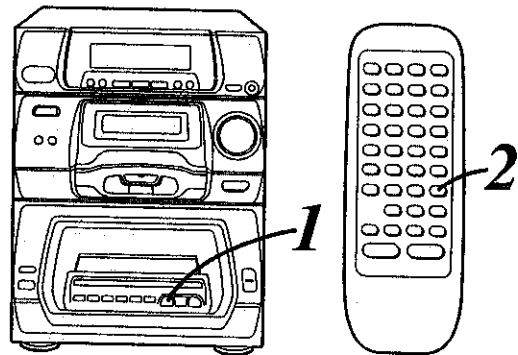

1 Press **MODE** to select "BLOCK".



2 Press **RANDOM**.



Play will begin.

- Once the changer has played the maximum 72 tracks, it stops automatically.
- The disc in slot No. 0 will not be played.
- If more than 25 tracks have been played, the same track may be played twice.

Program random play

The changer plays the programmed tracks in random order.

1 Program tracks you want to listen to.
(Follow steps 1-6 on page 18.)


2 Press **RANDOM**.



Play will begin.

Your program can hold a maximum of 24 tracks. When all tracks have been played, play will stop automatically.


Group random play

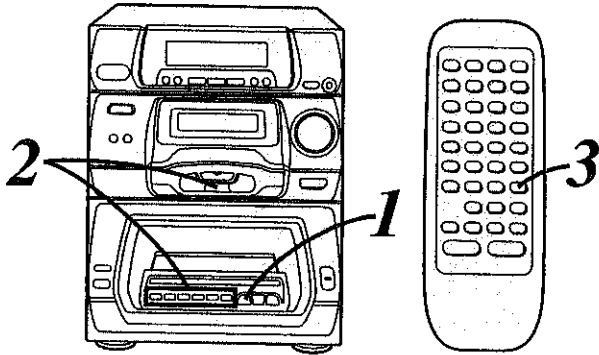

The changer randomly plays the tracks in the group in random order.

1 Press **MODE** to select "GROUP".

 2 Press the **GROUP FILE** button (A-F) for the group you want to play.



Then, press **■** and stop play.




3 Press **RANDOM**.
Play will begin.

- Once the changer has played the maximum 72 tracks, it stops automatically.
- If more than 25 tracks have been registered in the group, the same track may be played twice.

1-disc function


by remote control only

This function is convenient for ending play after the disc in play or the specified disc for which play is about to start has finished.

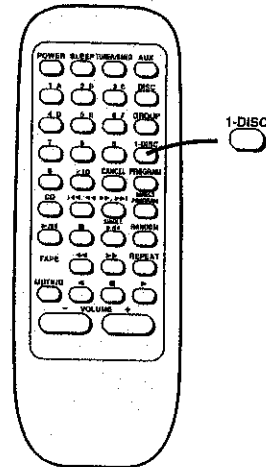

(Before or during play)

 Press **1-DISC**.



Press the button again to cancel.
"1-DISC" goes out.

The changer reverts back to the state it was in before this function was turned ON.

For your reference

The changer automatically cancels this function in the following cases.



- When the system is switched to the standby mode or the power is turned on.
 - When **SINGLE PLAY** is pressed
- Single disc play functions the same as 1-disc play.

Listening to compact discs

Repeat function



by remote control only

Play will continue endlessly in accordance with the specific play mode selected.

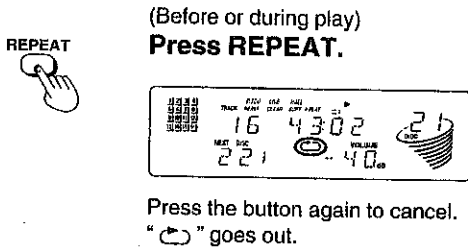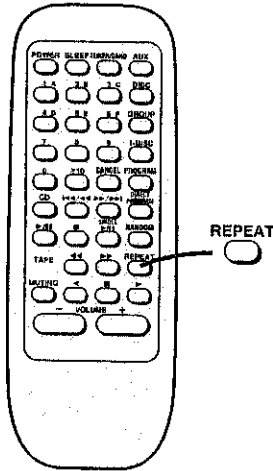

Search function

You can search rapidly forward or backward on the disc for specific sections.

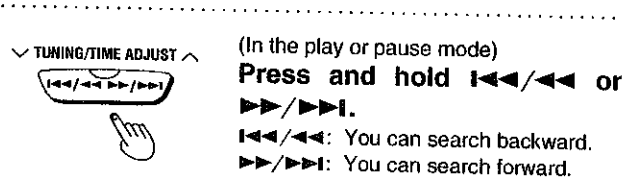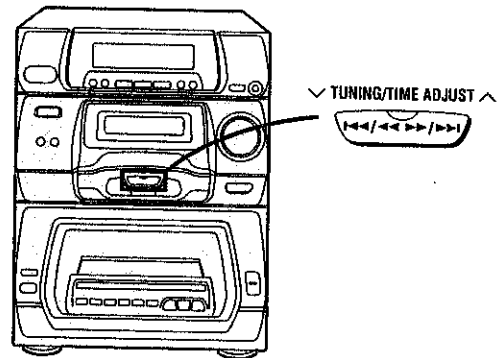

Release the button when you reach the desired point. The changer will return to the previous mode (play or pause).

In the sequential play mode:

All tracks of all discs will be played repeatedly.

In the single disc play mode:

The changer will repeatedly play the disc in slot No. 0.

In the one disc random play mode:

The changer will play all the tracks on the current disc in random order. When finished one round, it will start another and play continuously. The sequence differs each time.

In the full random play mode:

Once the changer has played the maximum 72 tracks, it will select a new random sequence and will continue playing.

In the group random play mode:

The changer will play all tracks in the group in random order. When finished one round, it will start another and continue endlessly in this manner.

In the program play mode:

The changer plays only the programmed selections in the programmed sequence repeatedly.

To repeat the same track over and over:/

To repeat programmed tracks:

1. Select the desired track using the program play procedure on page 18.
2. Press REPEAT to display "↻".
3. Press ▶/||.

In the program/random play mode:

You can search forward or backward only within the current track.

In other play modes:

You can search forward and backward within the current disc.


For your reference

The search function will begin slowly, and then, if the button is held down for longer than 3 seconds, it will change to high-speed search.

Skip functions

To skip discs

Use this function to skip discs when selecting a disc which you wish to listen to.

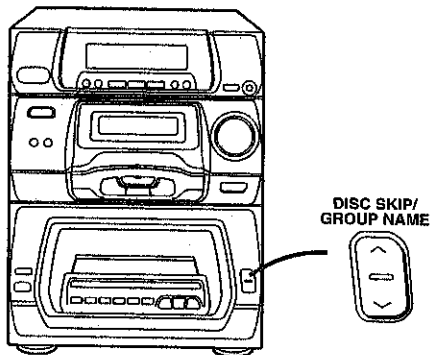

DISC SKIP/
GROUP NAME



Press **DISC SKIP/GROUP NAME** (\vee or \wedge) until you reach the desired disc.

\wedge : Skips forward to next disc.
 \vee : Skips backwards to the preceding disc.

The changer skips over empty slots.

When you select a disc and press \blacktriangleright , the changer will skip to the selected disc and will start play there.

Note


This function is not available during one disc random or program play.

For your reference


If you press DISC SKIP/GROUP NAME (\vee or \wedge) intermittently, the slot Nos. change slowly. If you hold the buttons down, the changer fast skips through numbers.

To skip tracks

Use this function to skip tracks when selecting a track which you wish to listen to.

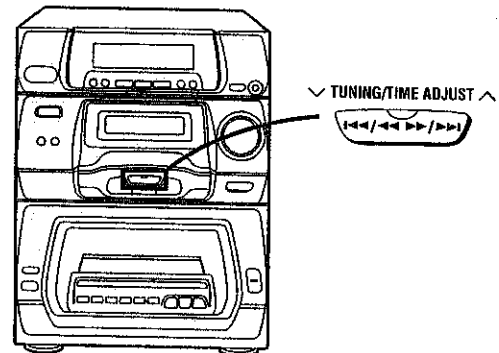

TUNING/TIME ADJUST

 

Press either $\blacktriangleleft/\blacktriangleleft$ or $\blacktriangleright/\blacktriangleright$ until you reach the desired track.

$\blacktriangleleft/\blacktriangleleft$: You can skip backward.
 $\blacktriangleright/\blacktriangleright$: You can skip forward.

When you select a track and press \blacktriangleright , the changer will skip to the selected track and will start play there.

In the sequential/single disc/disc grouping/program play mode: You can skip only within the current disc.

In the program play mode, you can skip from one track to another in the programmed sequence.

$\blacktriangleleft/\blacktriangleleft$: You can skip to the beginning of the track being played. If you press this button again quickly, you can skip to the beginning of the previous track. Remember that in a backward skip, the current track is included in the count.

$\blacktriangleright/\blacktriangleright$: You can skip as many tracks as the number of times you press the button.


In the random play mode:

$\blacktriangleleft/\blacktriangleleft$: You can skip to the beginning of the current track.

$\blacktriangleright/\blacktriangleright$: You can skip to the beginning of a next track in the random order the changer has selected.



You can also skip tracks when the changer is in the stop mode (except during random play) or pause mode.

Listening to tapes

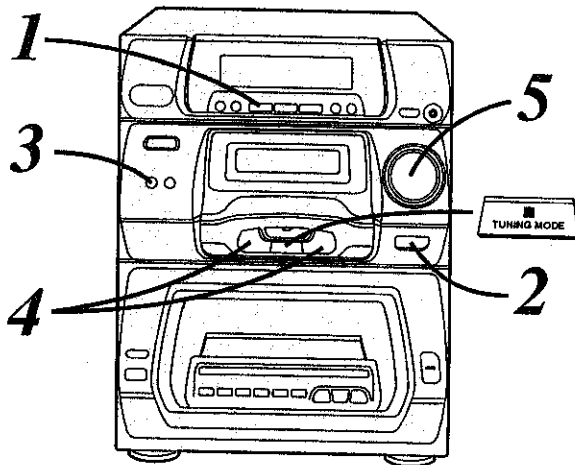


Press TAPE.

 The power will come on automatically, even if the stereo is on standby.

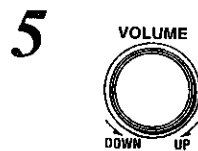


 Turn **VOLUME** to adjust the volume as you like.



Press ▲ OPEN, and then insert the tape.

Insert the tape with the exposed tape facing down. Close the holder.

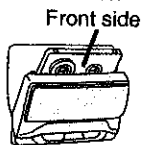

To stop tape playback:

Press ■.



For your reference

The tape will automatically stop when a different source mode is selected during its operation.

Type of tape which can be played correctly:

The system automatically identifies the type of tape.

| | |
|------------------------|---|
| NORMAL POSITION/TYPE I | ○ |
| HIGH POSITION/TYPE II | × |
| METAL POSITION/TYPE IV | × |


Playing may not turn out as you want it to when using HIGH position and METAL position tapes.



Press REV MODE to select the reverse mode.


Each time you press REV MODE, one of the indicators will light up.

- ↔: The deck plays one side only, and then stops automatically.
- ↔: The deck plays both sides, and then stops automatically.
- ↔: The deck plays both sides 8 times, and then stops automatically.

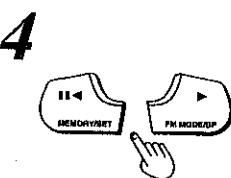

Press ◀ or ▶ to start playback.

 - ▶: The forward side (front side) will play.
- ◀: The reverse side will play.



To fast-forward or rewind the tape

Press I◀◀/◀◀ or ▶▶/▶▶I.


If the forward side (▶) of the tape is selected:

- ▶▶/▶▶I: The tape will be fast forwarded.
- I◀◀/◀◀: The tape will be rewound.

If the reverse side (◀) of the tape is selected:
The reverse operation will take place.

Changing sound quality and field

for playback only

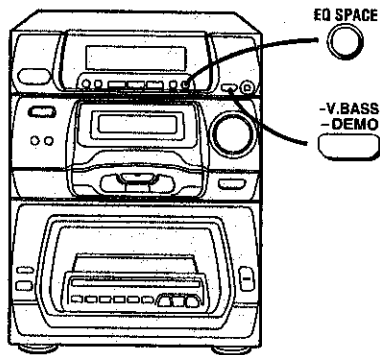


Selecting sound quality and field


Base your selection on the type of music and how you want to listen to it.



 Press **EQ SPACE** to select the desired mode.



 Each time the button is pressed, the indication will change as follows.



- DISCO:** Use to reproduce a long reverberating sound like that heard in discotheques.
- LIVE:** Use primarily for vocal pieces to add gloss to the vocals.
- HALL:** Use to impart a deep bass and spread which will make you feel as if you were in a large concert hall.
- HEAVY:** Use to add "punch" to rock and other music.
- CLEAR:** Use to clarify the treble range of jazz, etc.
- SOFT:** Use to listen to background music, etc.

 
To cancel the mode:

Press to select "FLAT".

Adding bass



Press **-V. BASS - DEMO**.




Press the button again to cancel. "V. BASS" goes out.

For your reference

You can not record with the sound quality or field. The sound quality and field are effective only to the playback sound.

Convenient functions

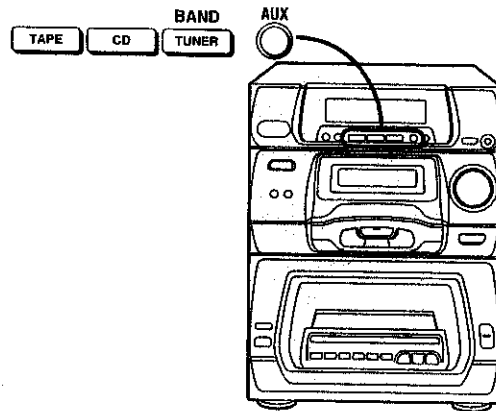

Easy play

When you load a CD or cassette in advance, you can start play directly from standby by pressing the appropriate selector button.

Listening to tapes



Press **TAPE**.

The reverse mode stores the previously selected mode in memory.

Listening to compact discs



Press **CD**.

- Play will begin from the disc that you last heard.
- When the tracks has been programmed, the play will start in the programmed sequence.

Listening to radio broadcasts



Press **TUNER BAND**.

You can receive the station last tuned in.


Listening to external units



Press **AUX**.

The stereo will turn on and the unit connected to the "AUX" terminals will be selected as the input source.

Convenient functions

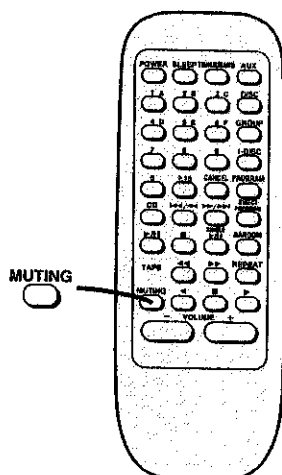


To mute the volume

by remote control only

This feature is convenient when you have a telephone call, etc.



 Press **MUTING**.



Press the button again to cancel. "MUTING" goes out. Muting can also be canceled by lowering the volume all the way (— dB).

 
When the system is turned off, the muting operation will be automatically canceled.

Demo function

This stereo comes with a "demo" function. The default setting is for the demo function to be ON.

Switching the demo function on or off:

Press and hold **-V.BASS/-DEMO** for about 2 seconds or more.



When the demo function is set to on:

•When the power is ON:

When the input source is set to "CD" or "TAPE", the demo function will run automatically after about 2 minutes or more pass in the stop mode.

You can turn the demo function OFF any time by pressing **▶** or **■**.

•When the system is in the power standby mode:

When you do not set the time, the demo function runs automatically.

Before recording

Your attention is drawn to the fact that recording pre-recorded tapes or discs or other published or broadcast material may infringe copyright laws.

Type of tape which can be recorded correctly

The unit automatically identifies the type of tape.

| | |
|------------------------|---|
| NORMAL POSITION/TYPE I | ○ |
| HIGH POSITION/TYPE II | × |
| METAL POSITION/TYPE IV | × |

Recording may not turn out as you want it to when using HIGH position and METAL position tapes.


How to advance the leader tape

Wind the leader tape forward so that recording can start as soon as you press the button. But, this is not necessary if edit-recording from CDs.

The leader tape is the first few revolutions that you cannot record on.

Magnetic section
(on which sound can be recorded)

Leader tape
(on which sound cannot be recorded)

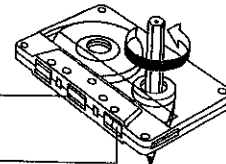

Concerning the volume level while recording

The deck automatically sets the recording level. If you change the volume level while recording, it does not affect the recording volume level.

Concerning the sound quality and field while recording

While recording, none of the changes you make to sound quality or field will affect recording.

While recording, "FLAT" is temporarily selected no matter what sound quality and field settings you selected. When finished recording, the stereo will revert back to your settings.


Note

You cannot open the cassette holder while recording.

To erase a recorded sound

1. Press **TAPE**.
2. Insert the recorded tape into deck.
3. Press **REV MODE** to select reverse mode.
4. Press **REC START/STOP**.

Recording from radio broadcasts

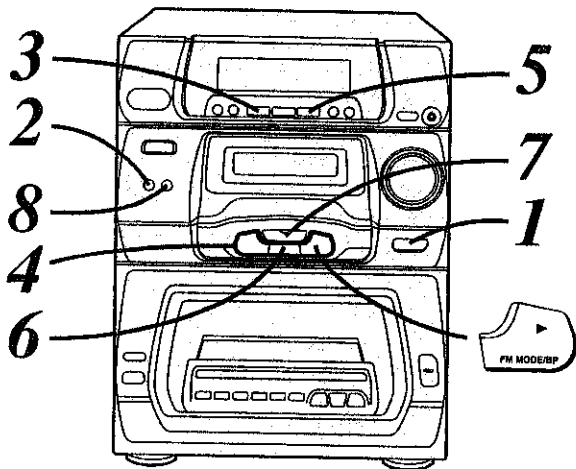

Advance the leader tape a few revolutions.

 
1 Press **▲ OPEN**, and then insert the tape. Close the holder.

2 Press **REV MODE** to select the reverse mode.

- ↔: One side will record, and then the tape will stop automatically at the tape end.
- ↔↔: Both sides will record (forward side→reverse side), and then the tape will stop automatically at the tape end.
- ↔↔↔: Same as above. (When you press REC START/STOP, "↔↔") will be automatically switched over to "↔↔".)

3 Press **TAPE**.

4 Press **◀** or **▶**, immediately followed by **■**. This selects which direction the tape runs in.



▶: Recording from forward side
◀: Recording onto reverse side

5 Press **TUNER BAND** to select "FM", "MW" or "LW".

For Australia and New Zealand

Note that for Australia and New Zealand, there are two bands of "FM" and "AM" instead of "FM", "MW" and "LW".

 
6 Press **TUNING MODE** to select "PRESET".



You can also select the desired broadcast station by tuning manually. (See page 11.)

7 Press **▼** or **▲** to select the preset channel.

8 Press **REC START/STOP** to start recording.



To stop recording:

Press REC START/STOP again. Recording can also be stopped by pressing **■**.

To cut an unnecessary part while recording:

1. Press REC START/STOP when hearing a unnecessary part. The cassette deck will go into the stop mode.
2. Press REC START/STOP when wanting resume recording again. Recording will continue in the same direction as before.

 
To reduce the noise while MW/LW (AM) recording (Beat proof function)



Press **FM MODE/BP** while recording.

Each time you press the button, BP 1, BP 2 and BP 3 will be displayed alternately. (For Australia and New Zealand: BP 1 and BP 2 will be displayed alternately and "AM" display appears instead of "MW" and "LW".)

Select the position where there is less noise.




Recording from compact discs

There are 2 ways to record from compact discs, normal recording and one-touch editing.


Normal recording

- Tracks are recorded in the order in which they are found on the CD.
- Tracks are cut in the middle when the end of the tape is reached.
- You can record from any point on the tape.

 When recording from one CD:

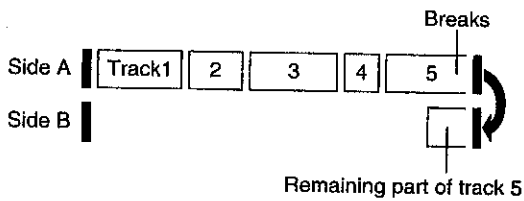


 When recording from more than one CD:

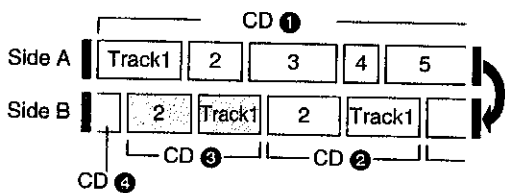


One-touch editing

- Tracks are recorded in the order in which they are found on the CD.
- Tracks are cut in the middle when the end of the tape is reached, but recording is resumed on side B.
- Recording always starts from the beginning of the tape. (Tapes are automatically rewound.)

 When recording from one CD:

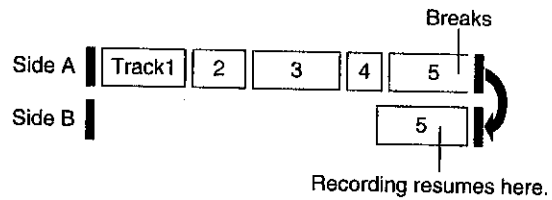

 When recording from more than one CD:

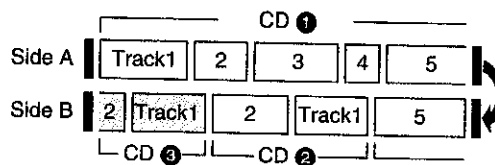


The link function automatically turns on between CDs to keep on recording.


For your reference


- You can specify the tracks to be recorded in the desired sequence using the program play procedure.
- The recorded tape should be long enough to record the desired tracks.

Normal recording

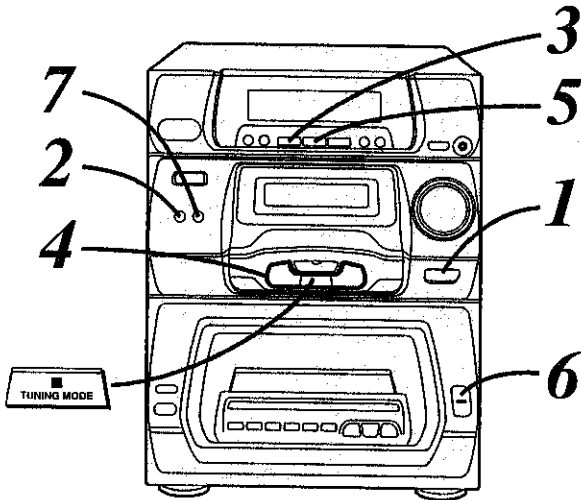


Advance the leader tape a few revolutions.


1  Press **▲ OPEN**, and then insert the tape.
Close the holder.

2  Press **REV MODE** to select the reverse mode.

- : One side will record, and then the tape will stop automatically at the tape end.
- ↔: Both sides will record (forward side → reverse side), and then the tape will stop automatically at the tape end.
- ↔: Same as above. (When you press REC START/STOP, "↔" will be automatically switched over to "→".)

 
3  Press **TAPE**.

 
4  Press **◀ or ▶**, immediately followed by **■**.
This selects which direction the tape runs in.




▶: Recording from forward side
◀: Recording onto reverse side

 5  Press **CD**.



6  **DISC SKIP/ GROUP NAME**
Press **DISC SKIP/GROUP NAME** (▼ or ▲) to select the disc you want to record.

 7  **REC START/STOP**
Press **REC START/STOP** to start recording.



To stop recording:

To stop recording after a 4 second silent interval:
Press **■**.


To stop recording without a silent interval:
Press **REC START/STOP**.
The CD will stop automatically too.

To record programmed tracks:

- ① Perform steps 1–5, and then press **PROGRAM** on the remote control.
- ② Press **DISC** on the remote control.
- ③ Select the disc from the remote control with the numeric buttons.
- ④ Select the track number from the remote control with the numeric buttons.
- ⑤ Repeat steps ②–④ until programming all tracks (max. 24 tracks).
- ⑥ Press **REC START/STOP** to start recording.

Recording from compact discs

One-touch editing

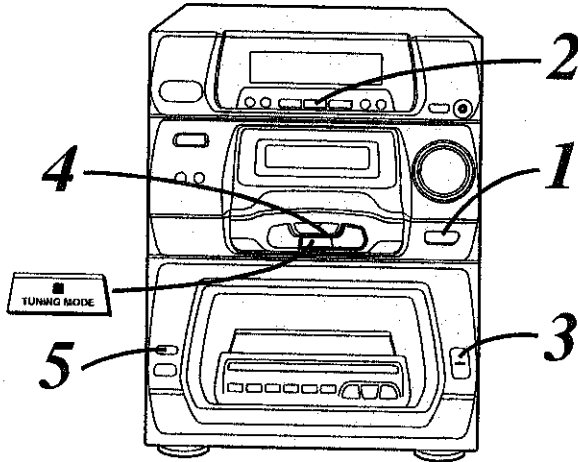


- You don't have to advance the leader tape.
- "↔" of the reverse mode will be automatically selected.

One-touch editing operation:

1. The cassette deck section will rewind the tape, and then advance the tape beyond the leader tape while making the non-recorded passage of about 10 seconds.
2. The recording on side A starts.
3. If the last track on side A has not yet finished recording, that track will automatically be recorded again from the beginning of side B.
4. Depending on the length of the tape, the last track on side B may be cut off in the middle.

When one-touch editing finishes:

 - The disc and track Nos. last recorded will remain on the display.



- If there is another CD to record, "LINK" will flash on the display and the stereo will automatically start recording the next CD.
 - If there isn't another CD to record, "LINK" will still flash on the display, but the stereo will go on standby. To continue recording, select a disc and press ▶.
- To quit linking, press ■.

To record programmed tracks:

- ① Perform steps 1–2 on the left of this page, and then press PROGRAM on the remote control.
- ② Press DISC on the remote control.
- ③ Select the disc from the remote control with the numeric buttons.
- ④ Select the track number from the remote control with the numeric buttons.
- ⑤ Repeat steps ②–④ until programming all tracks (max. 24 tracks).
- ⑥ Perform steps 4–5 on the left of this page.

 
1 Press **▲ OPEN**, and then insert the tape.
Close the holder.

2 Press **CD**.

3 Press **DISC SKIP/ GROUP NAME** (▼ or ▲) to select the disc you want to record.

4 Press **▶** and check play starts and which disc is being recorded.
After checking, press ■ and stop play.

5 Press **CD EDIT** to start recording.
The deck starts rewinding the tape.




It takes a little while after the button is pressed for the recording to actually start.

To stop editing:

- Press ■.
- The CD changer also stops.

Using the play timer

- Make sure that you have completed "Setting the time" on page 9.
- Select this timer when you want to use the timer as an alarm clock. You can wake up with listening to music (CD, tuner, tape or aux) at a desired volume level and time.

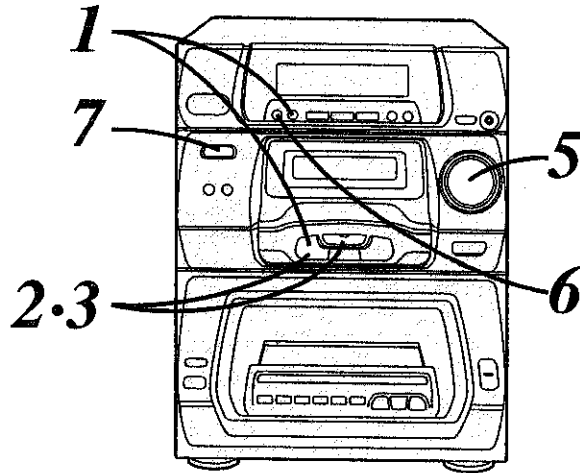

Preparation Switch on the power.

 
The following example in the figure shows how to set the play timer for playing a CD at -40 dB from 6:30 a.m. to 7:40 a.m.

1 Press **CLOCK/TIMER** three times to show "⌚ PLAY".





Within 7 seconds:

2 Press **MEMORY/SET**.




2 "ON" time setting

 1 Press **∇** or **∧** to select the starting hour.

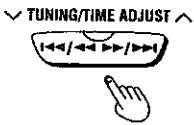

2 Press **MEMORY/SET**.

 


3 Press **∇** or **∧** to select the starting minutes.



3 Press **∇** or **∧** to select the starting minutes.





 4 Press **MEMORY/SET**.




3 "OFF" time setting

 

1 Press **∇** or **∧** to select the ending hour.

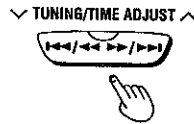


2 Press **MEMORY/SET**.

 

 3 Press **∇** or **∧** to select the ending minutes.

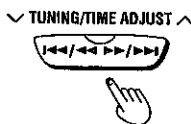

4 Press **MEMORY/SET**.

 

(Continued on next page)

Using the play timer

4

Select the desired source and then prepare the stereo for play.

When you play CD(s):

Press CD and insert CD(s).

Stop the CD(s) after playing.

When you play a tape:

Press TAPE and insert a tape.

Stop the tape deck after you select the direction of the tape.

When you play the radio:

Press TUNER BAND and tune in the desired station.

When you play a unit connected to the "AUX" terminals:

Press AUX.

5



 
Set the playback volume.

6



Press \odot REC/ \odot PLAY.

Your selections and setting will be stored in the timer's memory.



Confirm " \odot PLAY" lights on the display.

7



Press POWER to put your stereo on standby.

The timer play will start at the preset time with volume increasing gradually up to the volume level you preset.

To check settings (only while power is ON):

Press CLOCK/TIMER 3 times and check " \odot PLAY" is displayed. Two seconds later, the display will change in the following order.

- ① Play start time
- ② Play over time
- ③ Play source and playback volume

To change settings (only while power is ON):

- ① Press \odot REC/ \odot PLAY and check " \odot PLAY" goes out.
- ② Reprogram from step 1.

Using the timer at the same time setting continuously:

(You can accomplish this even if your stereo is on standby.)

Press \odot REC/ \odot PLAY and check " \odot PLAY" is displayed.

As long as " \odot PLAY" is displayed, the timer will work every morning at the same time.

To enjoy the desired source after the timer setting is completed:

1. After finishing step 6, start playing the desired source. Even if you change the volume level or music source, the timer play will start with the preset condition.

Note

- When you set the CD changer for timer playback, playback will start with the last disc played and in the last playback mode used.
2. Press POWER to standby mode after enjoying the play, and confirm CD(s) or a tape has (have) been inserted.

Notes

- If the power is on, the timer will not function. The system must be in the standby mode.
- The ON time and OFF time cannot be the same setting.
- If you switch the power to the standby mode while the play timer is functioning, the OFF time setting will not be activated.
- Play timer cannot be used in combination with the record timer.
- The lowest possible volume with the timer is -60 dB. If you set it lower than this, it will automatically be played back at -60 dB just the same.

For your reference

External sources must be connected to the "AUX" terminal. However, time settings apply only to this stereo. For more information, see the instruction manual of the connected unit.


To switch the timer OFF:

Press \odot REC/ \odot PLAY and check " \odot PLAY" goes out.

The settings made with the preceding procedure will however be kept in memory.

Using the record timer

- Make sure that you have completed "Setting the time" on page 9.
- Select this timer when you want to use the timer to record a midnight program or while you are out.

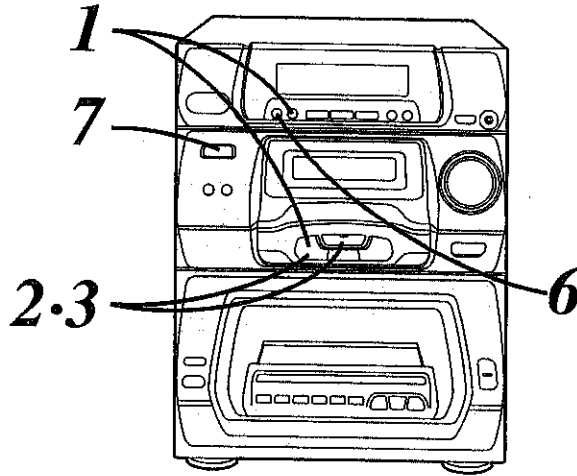

Preparation Switch on the power.

The following example in the figure shows how to set the record timer for recording FM broadcasts from 18:30 (6:30p.m.) to 20:00 (8:00p.m.).

1 **CLOCK/TIMER**

① Press **CLOCK/TIMER** two times to show "Ⓢ REC".

Within 7 seconds:
② Press **MEMORY/SET**.

2 "ON" time setting

① Press **∨** or **∧** to select the starting hour.

② Press **MEMORY/SET**.

③ Press **∨** or **∧** to select the starting minutes.

③ Press **∨** or **∧** to select the starting minutes.

④ Press **MEMORY/SET**.

3 "OFF" time setting

① Press **∨** or **∧** to select the ending hour.

② Press **MEMORY/SET**.

③ Press **∨** or **∧** to select the ending minutes.

④ Press **MEMORY/SET**.

(Continued on next page)

Using the record timer

4

Prepare for recording.

1. Insert a tape into the deck with the forward side facing you.
2. Select the reverse mode.
3. Select which direction the tape runs in.
4. Press EQ SPACE to select "FLAT".

5

Select the desired source.

When you record from the radio:
Press TUNER BAND to select a band and tune in the desired station.

 
When you record from a unit connected to the "AUX" terminals:
Press AUX.

6



Press \odot REC/ \odot PLAY.

Your selections and setting will be stored in the timer's memory.



Please confirm " \odot REC" lights on the display.

7



Press POWER to put your stereo on standby.

Recording will start 30 seconds before the set time.

Sound is automatically muted while the record timer is working.

To check settings (only while power is ON):

Press CLOCK/TIMER 2 times and check " \odot REC" is displayed. Two seconds later, the display will change in the following order.

- ① Recording start time
- ② Recording over time
- ③ Recording source

To change settings (only while power is ON):

- ① Press \odot REC/ \odot PLAY and check " \odot REC" goes out.
- ② Reprogram from step 1.

Using the timer at the same time setting continuously:

(You can accomplish this even if your stereo is on standby.)

Press \odot REC/ \odot PLAY and check " \odot REC" is displayed.

To enjoy the desired source after the timer setting is completed:

1. After finishing step 6, start playing the desired source. Even if you change the music source, the timer recording will start with the preset condition.
2. Press POWER to set the stereo on standby after enjoying play, and confirm a tape is inserted in the deck.

Notes

- If the power is on, the timer will not function.
- The ON time and OFF time cannot be the same setting.
- If you switch the power to the standby mode while the record timer is functioning, the OFF time setting will not be activated.
- Play timer cannot be used in combination with a record timer.

For your reference

- Set recording to start roughly two minutes ahead of time.
- External sources must be connected to the "AUX" terminal. However, time settings apply only to this stereo. For more information, see the instruction manual of the connected unit.


To switch the timer OFF:

Press \odot REC/ \odot PLAY and check " \odot REC" goes out. The settings made with the preceding procedure will however be kept in memory.

Using the sleep timer

by remote control only

The stereo has a sleep timer so that you can fall asleep with the music on and have the system stop by itself. When the set time elapses, the stereo goes into the power standby mode. You have up to 2 hours time available for listening and you can set the timer in 30 minute increments.

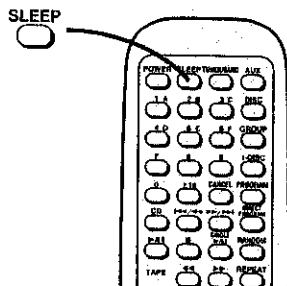


The following example in the figure shows how to set the system to standby mode after 30 minutes.



While enjoying the desired source:
Press SLEEP to select the desired time.

→0:30→1:00→1:30→2:00→OFF

(The display changes each time the button is pressed.) Time setting

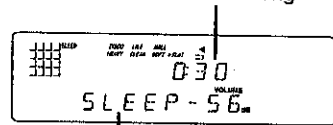

Check "SLEEP" is displayed.

The system is turned off after the set time has elapsed.

To cancel the sleep timer:

Press SLEEP to select "OFF".

To confirm the remaining time:

(only while power is ON)

Press SLEEP.

To change the time remaining during operation:

Press SLEEP to show the remaining time then press SLEEP to select the desired time.

Note

The sleep timer turns OFF automatically the moment you attempt to edit-record a CD.

To use two timers together

The sleep timer can be used in conjunction with the play timer or record timer.

Play timer and sleep timer:

To go to sleep listening to an FM broadcast, and wake up the next morning listening to a compact disc,

1. Program a CD for play timer.
Follow steps 1-6 on pages 31-32.
2. Tune in the desired band and station, and adjust the volume.
See page 11.
3. Set the sleep timer.

The volume of the play timer does not change if the volume of the sleep timer is changed.

Record timer and sleep timer:

To go to sleep listening to a compact disc, and then to make a timer recording from a radio broadcast,

1. Program the record timer.
Follow steps 1-6 on pages 33-34.
2. Start CD playback.
3. Set the sleep timer.

Note

Be sure to set the sleep timer to off before the timer recording begins.


Timer priority:

The sleep timer always has priority. Be sure not to overlap timer settings.

For your reference

The play timer cannot be used in combination with the record timer.

Using an external unit

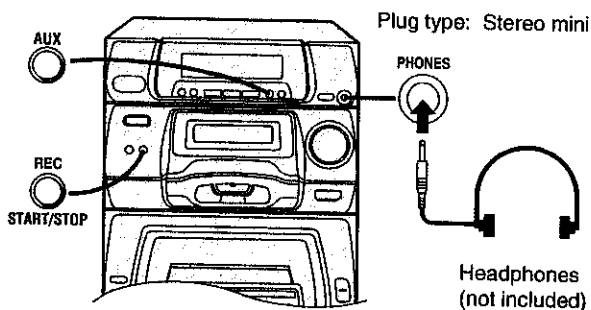

Listening to an external source

(See page 7 for external unit connection)

1. Press AUX.
The power will come on automatically, even if the stereo is on standby.
2. Start playback from the external source. (For details, refer to the owner's manual of the equipment.)

Recording from an external source

1. Follow steps 1-4 on page 27.
2. Press AUX.
3. Press REC START/STOP (recording starts).
4. Start playback from the external source. (For details, refer to the owner's manual of the equipment.)

To stop recording:

1. Press REC START/STOP.
2. Stop the source.

Listening with headphones

Note

Connect the headphones to the headphones jack.

- Before connecting, reduce the volume.
- Avoid listening for prolonged periods of time to prevent hearing damage.



Quick reference of remote control operations

Reference pages are indicated in black circles.

| <i>Common operation</i> | | | |
|-------------------------|---|-------------------------|------------|
| | Starting play directly from the power standby condition | TUNER/BAND, SINGLE, AUX | 25 |
| | Switching the system on and to the power standby mode | POWER | 9 |
| | Selecting the input source | TUNER/BAND, CD, AUX | 11, 13, 35 |
| | Adjusting the volume | - VOLUME + | 11, 13, 24 |
| | Muting the volume temporarily | MUTING | 26 |

| <i>Tuner/timer operation</i> | | | | |
|------------------------------|---|--|----|--|
| | Listening to radio broadcasts (Preset tuning) | TUNER/BAND → 1 A, 2 B, 3 C, 4 D, 5 E, 6 F, 7, 8, 9, 0, >10 | 11 | |
| | Operating/releasing the sleep timer | SLEEP | 35 | |
| | | | | |
| | | | | |



Compact disc section

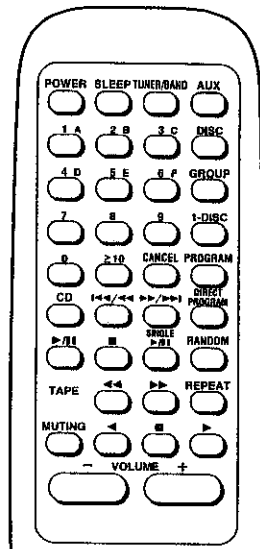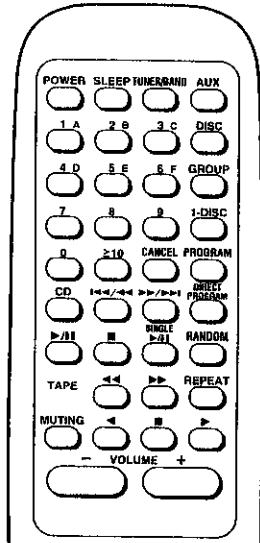


| | | |
|---------------------------------------|------------------------------------|-------|
| Starting play | | 13 |
| Temporarily stopping play | (During playback) | 13 |
| Listening to the disc in slot No. 0 | | 14 |
| Pausing the disc in slot No. 0 | (During playback) | |
| Stopping play | | 13 |
| Skipping forward/backward | Tap on the buttons repeatedly. | 23 |
| Searching forward/backward | Press and hold during playback | 22 |
| Repeating play | (Before or during playback) | 22 |
| Starting play from a particular track | | 14 |
| Random play | | 20 21 |

Quick reference of remote control operations

Compact disc section

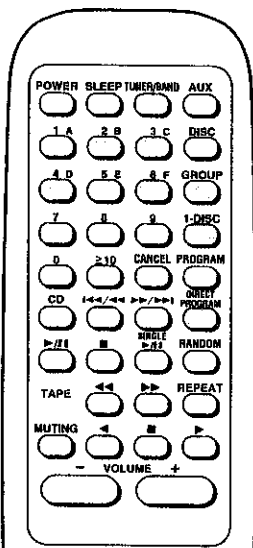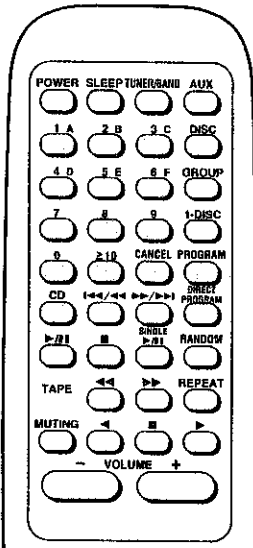


Playing a particular track you programmed

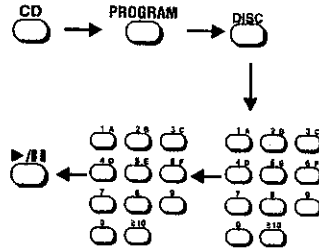

18

Cancelling a particular track you programmed

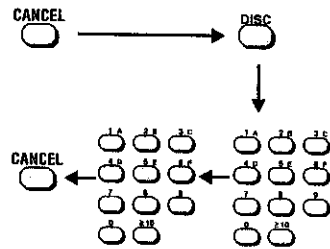

19

 
Directly programming tracks



19


Listening to groups A-F

(In the "BLOCK" mode)



13

 (In the "GROUP" mode)




17




Using the 1-disc function



21

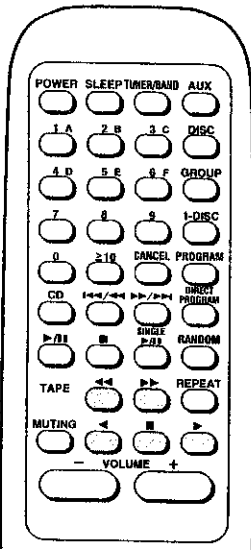Tape section



| | | |
|---------------------------------------|---|-------|
| Starting playback |  | 24 |
| Fast-forwarding or rewinding the tape |  | 24 |
| Stopping playback and recording |  | 24 27 |

Concerning compact discs


With this changer, you can only play compact discs having this mark.



Handling precautions


To open the compact disc case, gently press the sides of the top and pull up.

To remove the disc from the case, press the center holder and lift the disc, holding by the edges.

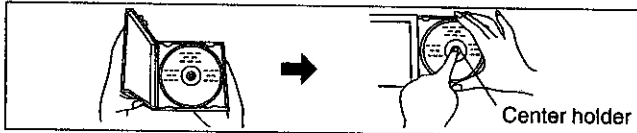

To return the disc to the case, insert the disc with the label facing up and press downward at the center.


Hold compact discs by the edges so as not to soil the surface with fingerprints. Fingerprints, dirt and scratches can cause skipping and distortion.

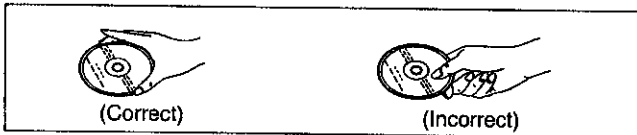

Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent on a disc.

If the surface is soiled, wipe gently with a soft, damp (water only) cloth.

Always move the cloth directly outward from the center of the disc, not in a circular motion as with standard phonograph records.

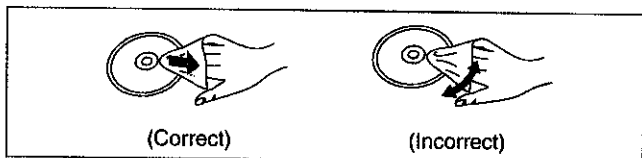

If you are taking the disc from a cold to a warm environment, moisture may form on the disc. Wipe this off with a soft, dry, lint-free cloth before using the disc.

Do not write on the label side with a ball-point pen or other writing instrument.

Storage precautions

Be sure to store discs in their cases to protect them from dust, scratches, and warping.

Do not place or store discs in the following places:

- 1) Locations exposed to direct sunlight
- 2) Humid or dusty locations
- 3) Locations directly exposed to a heat vent or heating appliance
- 4) In the glove compartment or on the rear deck of an automobile

Concerning cassette tapes

Selection of cassette tapes

Cassette tapes exceeding 100 minutes:

These tapes are handy for their long playback and recording time but be careful about repeatedly stopping and starting, rewinding and fast forwarding these tapes in short intervals as they are thin, tend to stretch and may become entangled in the deck mechanism.

Endless-tapes:


Failure to operate these tapes correctly may cause the tape to wind around the revolving parts.

For this unit, it is recommended to use the tape which is appropriate to the auto reverse mechanism.

Tape slack


Tape slack may cause the tape to break.

Use a pencil or similar object to take up the slack.

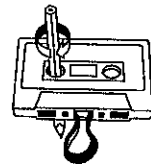


Erasure prevention

Remove the tab(s).

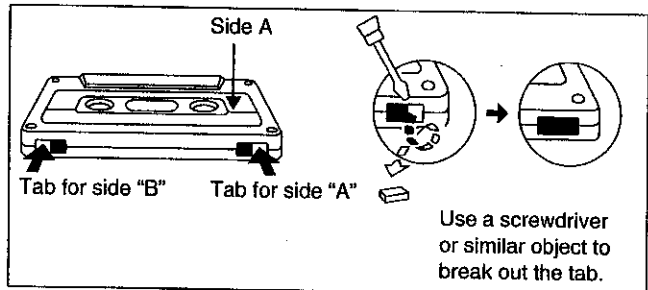

To re-record on a protected cassette

Cover the slot with adhesive tape.

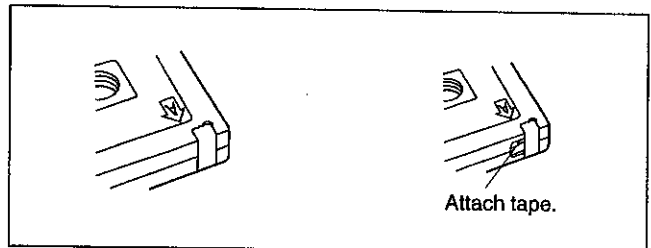

Do not cover the detection holes on high position and metal position tapes.

Tape storage

Tapes can be damaged if stored in places such as those described below.

- Where the temperature is high (35°C or higher) or where the humidity is high (80% or higher)
- Where there is a strong magnetic field (near a speaker, on top of a TV, etc.). Recording may become erased.
- In direct sunlight

Maintenance

Maintenance of external surfaces

To clean this unit, use a soft, dry cloth.
If the surfaces are extremely dirty, use a soft cloth dipped in a soap-and-water solution or a weak detergent solution.

Wring the cloth well before wiping the system.

Wipe once again with a soft, dry cloth.


Never use alcohol, paint thinner, benzine, or chemically treated cloths to clean this system. Such chemicals may damage the finish of your system.

Tape head care

To assure sound quality for recording and playback, be sure to clean the tape heads after approximately every 10 hours of use.

1. Press **▲ OPEN** to open the cassette holder.
2. Press **POWER** to put your stereo on standby.
3. Clean the heads, pinch roller and the capstan shaft with a cotton swab (or with a soft, lint-free cloth) slightly moistened with isopropyl alcohol.

Do not use any solution other than alcohol for head cleaning.

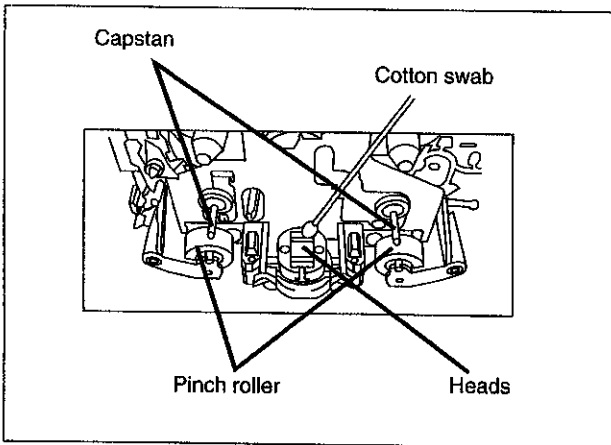

Troubleshooting guide

Before requesting service for this unit, check the chart below for a possible cause of the problem you are experiencing. Some simple checks or a minor adjustment on your part may eliminate the problem and restore proper operation. If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult your dealer for instructions.

| Problem | Probable cause(s) | Suggested remedy | Reference page(s) |
|---------|-------------------|------------------|-------------------|
|---------|-------------------|------------------|-------------------|

| Problems common to all systems | | | |
|--|---|--|------------|
| There is no sound when the power is ON. | Volume is set too low. | Adjust the volume level with the volume control. | 11, 13, 24 |
| The location of the various musical instruments is not well defined. | The (+) and (-) connections to one of the speakers are reversed. | Connect the speaker cord correctly. | 6 |
| The left and right sounds are reversed. | The left and right connections to the speaker are reversed. | Connect the speaker cords correctly. | 6 |
| When listening to the external unit, the left and right sounds are reversed. | The left and right connections to the external unit are reversed. | Connect the external unit's cord correctly. | 7 |
| Only one speaker is emitting sound. | One of the wires of the speaker cord is disconnected. | Connect the speaker cord correctly. | 6 |
| There is no sound when a source is being played. | The (+) and (-) wire of the speaker cords are shorted. | Switch the system to the standby mode, and reconnect the speaker cords so that they are not shorted. Then switch on the power. | 6 |
| "ERROR" message appears on the display. | Wrong operation has been done. | Operate the unit correctly by following the operating instructions. | |

| While listening to FM broadcasts | | | |
|--|--|---|---|
| There is a "rushing noise" during a stereo broadcast which is not audible during a monaural broadcast. | The transmitting station is a long distance away. | If you are using an indoor antenna, change to an outdoor antenna. | 7 |
| You hear excessive noise during a stereo broadcast, and occasionally the sound disappears. | The installation location and orientation of the antenna are unsuitable. | | |
| The stereo indicator flickers and does not light completely. | The transmitting station is a long distance away. The power of the TV set or VCR is ON. | | |
| The sound during a stereo broadcast is highly distorted. | There is a building or mountain nearby. [Distortion is caused by interference between the signal from the transmitting station (direct wave) and the signal reflected from the building or mountain (reflected wave).] | Use a high-grade outdoor antenna, and install it in a good location, height, and orientation for reception. | 7 |

| While listening to MW/LW (AM) broadcasts | | | |
|--|---|--|--|
| You hear an unusual beat sound. | You are using the system at the same time you are playing a TV set. | Switch off the TV set, or use the system further away from it. | |
| You hear a low-frequency hum. | The antenna wire is near the power cord. | Separate the antenna wire from the power cord. | |

| Problem | Probable cause(s) | Suggested remedy | Reference page(s) |
|---------|-------------------|------------------|-------------------|
|---------|-------------------|------------------|-------------------|

When there is a television set nearby

| | | | |
|---|--|---|---|
| The picture on the TV disappears or stripes appear on the screen. | The location and orientation of the antenna are incorrect. | If you are using an indoor antenna, change to an outdoor antenna. | 7 |
| | The wiring at the back of the system is unsuitable. | Separate the antenna wire of the TV set from the system. | |

While listening to tapes

| | | | |
|---|--|--|----|
| Sound is low, intermittent, poor quality, noisy, scratchy, or unsteady. | Heads are dirty. | Clean the heads. | 41 |
| The deck does not enter the recording mode. | The erase-prevention tabs are removed from the cassette. | Attach tape to cover the space left by removal of the erase-prevention tabs. | 40 |

While listening to compact discs

| | | | |
|--|---|---|----|
| The display does not show the correct indication. Disc play does not start when you press the play button. | The disc label is facing left. | Set the disc with the label facing right. | 12 |
| | The disc is dirty. | Wipe the disc with a soft cloth. | 40 |
| | The disc is scratched. | Replace the disc with a new one. | |
| | The disc is badly warped. | | |
| | The disc is a nonstandard one. | Replace the disc with a different one. | 40 |
| | There is condensation inside the CD changer. | Switch the power ON, and then wait for 60 minutes before using the CD changer. | |
| The error message "F61" appears on the display and the changer stops operating. | The protection circuitry has functioned because the positive and negative speaker connection wires are "shorted". | Turn off the system, and, after determining and correcting the cause, switch ON the power once again. | |
| The error message "TAKE OUT" appears on the display and the changer stops operating. | A disc has been put in the slot of the disc in play. | Remove the disc whose number is displayed and close the rack panel. | |

While using the remote control

| | | | |
|--|--|--|---|
| The system cannot be operated with the remote control. | The batteries are installed in the reverse polarity. | Re-insert the batteries in the correct polarity. | 5 |
| | The batteries are run-down. | Replace the batteries with new batteries. | 5 |

When a CD does not return to its slot ("TAKE OUT" flashes on the display):

Check whether another disc is in the slot or not. If not, hold down the ■ (stop) button for 4 seconds. The changer will then eject the disc. If this proves to be ineffective, contact the place of purchase.

Technical specifications

AMPLIFIER SECTION

| | |
|---|--|
| 1 kHz continuous power output, both channels driven | |
| DIN | 2×20 W (THD 1%, 6Ω) |
| RMS | 2×25 W (THD 10%, 6Ω) |
| Total harmonic distortion | |
| Half power at 1 kHz | 0.07% (6Ω) |
| Frequency response | |
| AUX | 60 Hz–20 kHz (–3 dB) |
| Input sensitivity and impedance | |
| AUX | 250 mV, 22 kΩ |
| Tone controls | |
| 6-EQ SPACE modes | HEAVY, CLEAR, SOFT, DISCO, LIVE, HALL |
| V.BASS (volume at –30 dB) | 63 Hz, 7 dB |
| Load impedance | 6Ω |

FM TUNER SECTION

| | |
|---------------------------|----------------------------|
| Frequency range | 87.5–108 MHz |
| Sensitivity | 23.3 dBf (4.0 μV, IHF '58) |
| Total harmonic distortion | |
| MONO | 0.3% |
| STEREO | 0.5% |
| S/N | |
| MONO | 60 dB (65 dB, IHF) |
| Antenna terminal(s) | 75Ω (unbalanced) |

AM TUNER SECTION

| | |
|--------------------------|--------------|
| Frequency range | |
| (For United Kingdom) | |
| MW | 522–1611 kHz |
| LW | 144–288 kHz |
| (For others) | |
| AM | 522–1611 kHz |
| Sensitivity (for 500 mW) | |
| (For United Kingdom) | |
| MW (at 999 kHz) | 250 μV/m |
| LW (at 252 kHz) | 500 μV/m |
| (For others) | |
| AM (at 999 kHz) | 250 μV/m |

CASSETTE DECK SECTION

| | |
|-------------------------------|--|
| Track system | 4 tracks, 2 channels |
| Heads | |
| Record/playback | Solid permalloy head (Rotary head) |
| Erasure | Double gap ferrite head |
| Motor | DC servo motor |
| Recording system | AC bias 100 kHz |
| Erasing system | AC erase 100 kHz |
| Tape speed | 4.8 cm/s |
| Frequency response | |
| [(+3 dB, –6 dB) at deck out] | |
| NORMAL | 35 Hz–14 kHz |
| S/N | 50 dB (A weighted) |
| Wow and flutter | 0.18% (WRMS) |
| Fast forward and rewind times | |
| | Approx. 120 seconds with C-60 cassette tape |

CD SECTION

| | |
|-------------------------|--------------------------------|
| Sampling frequency | 44.1 kHz |
| Decoding | 16 bit linear |
| Beam source/wave length | Semiconductor laser/780 nm |
| Number of channels | Stereo |
| Frequency response | 20 Hz–20 kHz (+1 dB, –2 dB) |
| S/N | |
| SP OUT | 85 dB (JIS.A) |
| Wow and flutter | Below measurable limit |
| Digital filter | 8 fs |
| D/A converter | MASH (1 bit DAC) |

SPEAKER SECTION

| | |
|-----------------------------|--|
| Type | 2 way 1 speaker, bass-ref |
| Speaker(s) | |
| Woofer | 12 cm cone type |
| Tweeter | 6 cm cone type |
| Impedance | 6Ω |
| Input power | |
| (For United Kingdom) | 40 W (music) 20 W (DIN) |
| (For others) | 80 W (music) 40 W (DIN) |
| Output sound pressure level | 85 dB/W (1.0 m) |
| Cross over frequency | 8 kHz |
| Frequency range | |
| | 47 Hz–22 kHz (–16 dB) 54 Hz–20 kHz (–10 dB) |
| Dimensions (W×H×D) | 200×345×207 mm |
| Weight | 2.9 kg |

GENERAL

| | |
|--------------------|---------------------|
| Power supply | AC 50 Hz, 230–240 V |
| Power consumption | 100 W |
| Dimensions (W×H×D) | 270×347×424 mm |
| Weight | 9.7 kg |

Notes:

- Specifications are subject to change without notice.
Weight and dimensions are approximate.
- Total harmonic distortion is measured by the digital spectrum analyzer.

MASH is a trademark of NTT.

Matsushita Electric Industrial Co., Ltd.
Central P.O. Box 288, Osaka 530-91, Japan